


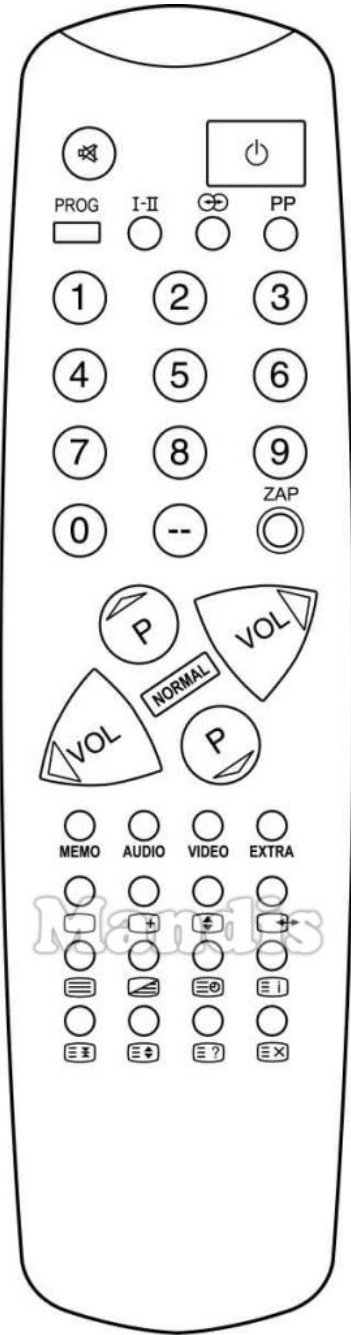

Original		Replacement		Original		Replacement	
	Mute		Mute / Dimmer		ZAP		Smart / List
	Power		Power		Up / P+		Up
	Prog		TV/Radio /		Up / P+		CH+ / Page+
	I-II		Audio / Lang I/II		Right / Vol+		Right
	O to O		Sound / Title		Right / Vol+		Vol+
	PP		Back / Return		Left / Vol-		Left
	1		1		Left / Vol-		Vol-
	2		2		Normal		OK
	3		3		Down / P-		Down
	4		4		Down / P-		CH- / Page-
	5		5		Red / Memo		Red / Netflix / Search
	6		6		Green / Audio		Green / APP / Repeat
	7		7		Green / Audio		Shift + Audio / Lang I/II
	8		8		Yellow / Video		Yellow / YouTube / Repeat
	9		9		Blue / Extra		Blue / Prime Video / Random
	0		0		[ ]		Display / Media
	--		Guide / EPG / --		[ + ]		Stop / Hold





Original	Replacement
[ ♦ ]	OPT-TOOLS SETUP Setup / OPT /
[ ]↔	TOP MENU D.MENU D.Menu / Top
[ ≡ ]	GOTO TEXT Text / Goto
[ /≡ ]	SHIFT + GOTO Text /
[ ≡ ⊕ ]	EQ SUBTITLE Subtitle / EQ
[ ≡ i ]	ANGLE INFO Info / Angle
[ ≡ □ ]	STEP-FREEZE Pause / Step / Freeze
[ ≡ ♦ ]	SIZE ZOOM Zoom / Size
[ ≡ ? ]	RDS AV INPUT AV / Input / RDS
[ ≡ X ]	CLEAR EXIT Exit / Cancel / Clear

Original	Replacement

