


 









 









 

 



 

 


 



 

 

 

 





 





 





 







| Original | Replacement | Original | Replacement |
|---|---|--|---|
|  Power |  Power |  0 |  0 |
|  Volume Up |  Vol + |  CD |  Yellow |
|  Volume Down |  Vol - |  +10 |  Guide |
|  Sleep |  Sleep |  Tape |  Blue |
|  Timer Standby |  Shift + Power |  Video1/DAT |  Smart |
|  Band |  Green |  Video 2/AUX |  Media |
|  Mono Tuner |  TV/R |  DSP |  3D |
|  Mode Display |  Info |  PRGM/Test |  Menu |
|  1 |  1 |  GEQ |  Back |
|  2 |  2 |  Manual/Mode |  Pre Ch |
|  3 |  3 |  Mute |  Mute |
|  4 |  4 |  Volume Select |  Dual |
|  5 |  5 |  Up |  Up |
|  6 |  6 |  Down |  Down |
|  7 |  7 |  Right |  Right |
|  8 |  8 |  Left |  Left |
|  9 |  9 |  Direct |  Options |





| Original | Replacement | Original | Replacement |
|---|--|----------|-------------|
|  Karaoke |  Subt | | |
|  AI Function |  Text | | |
|  T-Bass |  AV | | |
|  Dolby Pro Logic |  Format | | |
|  BBE |  Red | | |
|  PRGM Band |  Shift + Menu | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |





| Original | Replacement |
|--|---|
|  Power |  Power |
|  Volume Up |  Vol + |
|  Volume Down |  Vol - |
|  Mute |  Mute |
|  Band |  Green |
|  CD |  Yellow |
|  Tape |  Blue |
|  Video1/DAT |  Smart |
|  Video2/AUX |  Media |
|  Repeat |  Text |
|  Random |  AV |
|  Disc Skip |  Info |
|  Disc Direct Play 1 |  Shift + 1 |
|  Disc Direct Play 2 |  Shift + 2 |
|  Disc Direct Play 3 |  Shift + 3 |
|  1 |  1 |
|  2 |  2 |

| Original | Replacement |
|--|--|
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 |  0 |
|  +10 |  Guide |
|  PRGM CD |  Menu |
|  Play/Pause |  Play |
|  Stop/Clear |  Stop |
|  Search/Check |  >> |
|  I<< |  I<< |
|  Edit AI |  Format |
|  Edit PRGM |  3D |
|  <> Deck 1 |  Pause |




 

 



 

 





 

 




| Original | Replacement | Original | Replacement |
|--------------|-----------------|----------|-------------|
| Stop Deck 1 | + Shift + Stop | | |
| >>/>> Deck 2 | >> | | |
| << Deck2 | << | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |





| Original | Replacement |
|---|--|
|  Power |  Power |
|  Volume Up |  Vol + |
|  Volume Down |  Vol - |
|  Mute |  Mute |
|  Band |  Green |
|  CD |  Yellow |
|  Tape |  Blue |
|  Video1/DAT |  Smart |
|  Video2/AUX |  Media |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |

| Original | Replacement |
|--|---|
|  9 |  9 |
|  0 |  0 |
|  +10 |  Guide |
|  PRGM DAT |  Menu |
|  <> Deck 2 |  Play |
|  Stop Deck 2 |  Stop |
|  >> Deck 2 |  >> |
|  << Deck 2 |  << |
|  Rec/Rec Mute |  Rec |
|  Pause |  Pause |

