












 















	Original	Replacement	Original	Replacement
	Power			
	Mute			
	Menu			
	Vol+			
	Vol-			
	I<<			
	Play / Pause			
	Play / Pause			
	>>I			
	Source+			
	Source-			
	Mode			
	Display	