



Original	Replacement	Original	Replacement
 Power	 Power	 Yellow/Repeat	 Yellow
 I<<	 I<<	 Blue/A-B	 Blue
 Open/Close	 Eject	 CH+	 Ch +
 <<	 <<	 CH-	 Ch -
 >>	 >>	 Tv-Menu	 Menu
 >>	 >>	 TV/AV	 AV
 Play/Pause	 Play	 Vol+	 Vol +
 TV/TXT/Language	 Text	 Vol-	 Vol -
 Cancel/Zoom	 Shift + Eject	 DTV	 Smart
 Reveal/Subtitle	 Subt	 DVD Setup	 Shift + Menu
 Stop	 Stop	 Exit	 Exit
 Hold/Menu	 D. Menu	 Display	 Shift + Info
 Size/Angle	 Format	 Up	 Up
 Subpage/Title	 Options	 Down	 Down
 Index/Goto	 Media	 Right	 Right
 Red/Program	 Red	 Left	 Left
 Green/Slow	 Green	 OK	 Ok





Original		Replacement	
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--	 +  + 	Shift + Guide
	Recall	 + 	Pre Ch
	Picture	 +  + 	Shift + Format
	Sound	 +  + 	Shift + Dual
	Nicam/A2	 + 	Dual
	Mute		Mute
	Sleep	 + 	Sleep

Original		Replacement	
	Info	 + 	Info
	Subtitle	 +  + 	Shift + Subt
	Channel List	 + 	List
	EPG	 + 	Guide
	Tv/Radio	 + 	TV/R
	FAV	 +  + 	Shift + Pre Ch
	Aspect	 + 	3D

