



Original		Replacement		Original		Replacement	
	Power		Power		>>		>> / Preset+
	Function Tv		AV / Input / RDS		<<		<< / Tune-
	Eject		Eject / Surround		>>		>> / Tune+
	Sleep		Sleep / Timer		Stop		Stop / Hold
	1/RDS Display		1		Play		Play / Slow
	2		2		Pause		Pause / Step / Freeze
	3/TA		3		Vol+		Vol+
	4/PTY-		4		Mute		Mute / Dimmer
	5/PTY Search		5		Tuning/CH+		Shift + >> /
	6/PTY+		6		Tuning/CH+		CH+ / Page+
	7		7		Vol-		Vol-
	8		8		Repeat		Shift + Green / APP /
	9		9		Tuning/CH-		CH- / Page-
	PL II		Audio / Lang I/II		Tuning/CH-		Shift + << /
	0		0		Disc Menu		D.Menu / Top
	DSP/EQ		Subtitle / EQ		Menu		Menu / Home
	I<<		I<< / Preset-		Title Menu		Sound / Title









 



 



 

 









 

 




 




 







 

 







 













Original		Replacement		Original	Replacement
	Tools		Setup / OPT /		
	Up		Up		
	Info		Info / Angle		
	Left		Left		
	Enter		OK		
	Right		Right		
	Return		Back / Return		
	Down		Down		
	Exit		Exit / Cancel / Clear		
	Red		Red / Netflix / Search		
	Green/Tuner		Green / APP / Repeat		
	Yellow/MO/ST		Yellow / YouTube / Repeat		
	Blue/CD Ripping		Blue / Prime Video / Random		
	Dimmer		Shift + Dimmer / Mute / Dimmer		
	S.Vol		Smart / List		
	P.Bass/Audio Upscale		Display / Media		





Original		Replacement		Original		Replacement	
	Power		Power		Pause		Pause / Step / Freeze
	Function Tv		AV / Input / RDS		Vol+		Vol+
	Sleep		Sleep / Timer		Mute		Mute / Dimmer
	1		1		CH+		CH+ / Page+
	2		2		Vol-		Vol-
	3		3		CH-		CH- / Page-
	4		4		Menu		Menu / Home
	5		5		Tools		Setup / OPT /
	6		6		Up		Up
	7		7		Info		Info / Angle
	8		8		Left		Left
	9		9		Enter		OK
	0		0		Right		Right
	<<		<< / Tune-		Return		Back / Return
	>>		>> / Tune+		Down		Down
	Stop		Stop / Hold		Exit		Exit / Cancel / Clear
	Play		Play / Slow		Red		Red / Netflix / Search





Original	Replacement
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random

Original	Replacement

