




 
 


 












 




Original	Replacement
 Mute	 Mute / Dimmer
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 ✓	 Guide / EPG / -/--
 0	 0
 Red / <<<	 Red / Netflix / Search
 Red / <<<	 <<< / Tune-
 Green / Stop	 Green / APP / Repeat
 Green / Stop	 Stop / Hold

Original	Replacement
 Yellow / Play	 Play / Slow
 Yellow / Play	 Yellow / YouTube / Repeat
 Blue / >>>	 >>> / Tune+
 Blue / >>>	 Blue / Prime Video / Random
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 SFI	 D.Menu / Top
 Exit / Recall	 Back / Return
 Exit / Recall	 Exit / Cancel / Clear
 Info	 Info / Angle
 Prog +	 CH+ / Page+
 TV / Radio	 TV/Radio /
 Vol +	 Vol+
 Prog -	 CH- / Page-













 

 

























Original	Replacement
Mute	Mute / Dimmer
Power	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
✓	Guide / EPG / -/--
0	0
A/B	Shift + Yellow / YouTube /
Red / <<<	<<< / Tune-
Red / <<<	Red / Netflix / Search
Green / Stop	Green / APP / Repeat

Original	Replacement
Green / Stop	Stop / Hold
Yellow / Play	Play / Slow
Yellow / Play	Yellow / YouTube / Repeat
Blue / >>>	>>> / Tune+
Blue / >>>	Blue / Prime Video / Random
Up	Up
Left	Left
OK	OK
Right	Right
Down	Down
SFI	D.Menu / Top
Exit / Recall	Exit / Cancel / Clear
Exit / Recall	Back / Return
Info	Info / Angle
Prog +	CH+ / Page+
TV / Radio	TV/Radio /
Vol +	Vol+







Original	Replacement
 Mute	 Mute / Dimmer
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 ✓	 Guide / EPG / -/--
 0	 0
 A/B	 Shift + Yellow / YouTube /
 Red / <<<	 Red / Netflix / Search
 Red / <<<	 <<< / Tune-
 Green / Stop	 Stop / Hold

Original	Replacement
 Green / Stop	 Green / APP / Repeat
 Yellow / Play	 Play / Slow
 Yellow / Play	 Yellow / YouTube / Repeat
 Blue / >>>	 >>> / Tune+
 Blue / >>>	 Blue / Prime Video / Random
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 SFI	 D.Menu / Top
 Exit / Recall	 Back / Return
 Exit / Recall	 Exit / Cancel / Clear
 Info	 Info / Angle
 Prog +	 CH+ / Page+
 TV / Radio	 TV/Radio /
 Vol +	 Vol+



