
 
 


 

 

 




 


 





 
 

 

 


 




| Original | Replacement | Original | Replacement |
|-------------|---|------------|---|
| On/Off |  Power | OK Enter |  Ok |
| Mute |  Mute | Menu Right |  Right |
| Update |  Play | Menu Off |  Exit |
| Reveal |  Pause | Menu Down |  Down |
| Txt Stop |  Stop | Back |  Back |
| Info |  Rec | Volume+ |  Vol + |
| Subt.List |  Subt | Chan.Up |  Ch + |
| Sleep Timer |  Sleep | Volume- |  Vol - |
| Return TV |  TV/R | Menu audio |  Dual |
| Menu video |  D. Menu | Chan.Down |  Ch - |
| Text |  Text | 1 |  1 |
| Txt Expand |  Eject | 2 |  2 |
| TV/AV |  AV | 3 |  3 |
| Menu |  Menu | 4 |  4 |
| Menu Up |  Up | 5 |  5 |
| Display |  Info | 6 |  6 |
| Menu Left |  Left | 7 |  7 |



| Original | Replacement | Original | Replacement |
|---------------|--|----------------|--|
| 8 |  8 | Nicam/Mono |  Shift + Green |
| 9 |  9 | Level L |  Shift + Yellow |
| Guide -/-- 1. |  Guide | Level R/Woofer |  Shift + Blue |
| 0/10 |  0 | | |
| 2.Fav P/C 2. |  Pre Ch | | |
| Red |  Red | | |
| Green |  Green | | |
| Yellow |  Yellow | | |
| Blue |  Blue | | |
| Audio- |  I<< | | |
| Tone+ |  >> | | |
| Tone- |  << | | |
| Audio+ |  >>I | | |
| Browse |  Shift + Back | | |
| Contrast+ |  Shift + Ch + | | |
| Contrast- |  Shift + Ch - | | |
| Surround |  Shift + Red | | |

