


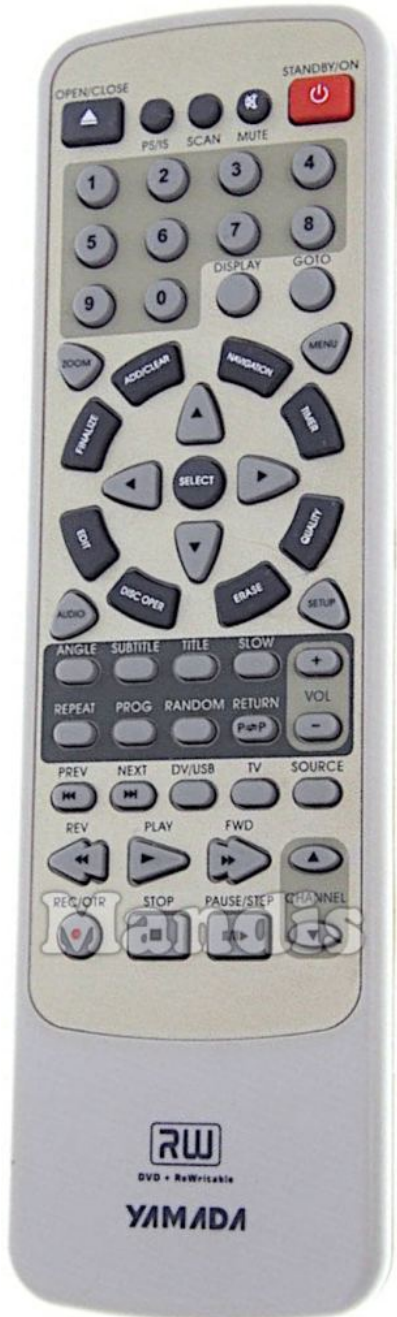

Original	Replacement
 Standby / On	 Power
 Open / Close	 Eject
 PS/IS	 Red
 Scan	 Green
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Display	 Info
 Goto	 Guide

Original	Replacement
 Zoom	 Shift + Eject
 Add / Clear	 Exit
 Navigation	 List
 Menu	 Menu
 Finalize	 Yellow
 Timer	 Shift + AV
 Up	 Up
 Left	 Left
 Select	 Ok
 Right	 Right
 Down	 Down
 Edit	 Blue
 Quality	 3D
 Audio	 Dual
 Disc Oper	 Smart
 Erase	 Shift + Back
 Angle	 Format





Original	Replacement
 Title	 D. Menu
 Setup	 OPT Options
 Subtitle	 SUBT Subt
 Slow	 +  Shift + Play
 Vol+	 Vol +
 Vol-	 Vol -
 Repeat	 TEXT Text
 Prog	 SLEEP Sleep
 Random	 +  Shift + TV/R
 Return P<->P	 BACK Back
 DV/USB	 MEDIA Media
 I<< Prev	 I<<
 Next >>I	 >>I
 TV	 TV/R
 Source	 AV
 << Rev	 <<
 Play	 Play

Original	Replacement
 Fwd >>	 >>
 Channel+	 Ch +
 Channel-	 Ch -
 Rec / Otr	 Rec
 Stop	 Stop
 Pause / Step	 Pause

