

















 



















Original	Replacement
 Power	 Power
 1	 1
 2	 2
 3	 3
 PIP	 Setup / OPT /
 4	 4
 5	 5
 6	 6
 Format	 Picture / Format
 7	 7
 8	 8
 9	 9
 ?	 Smart / List
 0	 0
 Mute	 Mute / Dimmer
 i	 Info / Angle
 Z	 Menu / Home

Original	Replacement
 Up / P+	 CH+ / Page+
 Up / P+	 Up
 Left / Vol-	 Left
 Left / Vol-	 Vol-
 OK	 OK
 Right / Vol+	 Right
 Right / Vol+	 Vol+
 TXT	 Text / Goto
 Down / P-	 Down
 Down / P-	 CH- / Page-
 TV-G	 Display / Media
 MHP	 D.Menu / Top
 A/B	 Shift + Yellow / YouTube /
 Radio	 Shift + 6
 Radio	 Shift + TV/Radio / Program
 Red / Picture	 Red / Netflix / Search
 Red / Picture	 Shift + Picture / Format



















 



















Original	Replacement	Original	Replacement
	Sleep / Timer		
	Green / APP / Repeat		
	Pause / Step / Freeze		
	Yellow / YouTube / Repeat		
	Blue / Prime Video / Random		
	Sound / Title		
	+ Shift + 1		
	TV/Radio /		

















Original	Replacement
 Power	 Power
 1	 1
 2	 2
 3	 3
 PIP	 Setup / OPT /
 4	 4
 5	 5
 6	 6
 Format	 Picture / Format
 7	 7
 8	 8
 9	 9
 ?	 Smart / List
 0	 0
 Mute	 Mute / Dimmer
 i	 Info / Angle
 Z	 Menu / Home

Original	Replacement
 Up / P+	 CH+ / Page+
 Up / P+	 Up
 Left / Vol-	 Left
 Left / Vol-	 Vol-
 OK	 OK
 Right / Vol+	 Right
 Right / Vol+	 Vol+
 TXT	 Text / Goto
 Down / P-	 Down
 Down / P-	 CH- / Page-
 TV-G	 Display / Media
 Repeat	 Shift + Green / APP /
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Play	 Play / Slow
 Red / I<	 I<< / Preset-
 Red / I<	 Red / Netflix / Search





	Original	Replacement
	Green / >	 >> / Preset+
	Green / >	 Green / APP / Repeat
	Yellow / <<	 Yellow / YouTube / Repeat
	Yellow / <<	 << / Tune-
	Blue / >>	 >> / Tune+
	Blue / >>	 Blue / Prime Video / Random

	Original	Replacement





Original	Replacement
	Power
	1
	2
	3
	Setup / OPT /
	4
	5
	6
	Picture / Format
	7
	8
	9
	Smart / List
	0
	Mute / Dimmer
	Info / Angle
	Menu / Home

Original	Replacement
	Up
	CH+ / Page+
	Left
	Vol-
	OK
	Right
	Vol+
	Text / Goto
	Down
	CH- / Page-
	Display / Media
	+ Shift + Green / APP /
	Pause / Step / Freeze
	Stop / Hold
	Play / Slow
	I<< / Preset-
	Red / Netflix / Search





	Original	Replacement
	Green / >	>> / Preset+
	Green / >	Green / APP / Repeat
	Yellow / <<	<< / Tune-
	Yellow / <<	Yellow / YouTube / Repeat
	Blue / >>	>> / Tune+
	Blue / >>	Blue / Prime Video / Random

Original	Replacement

