 




Original	Replacement	Original	Replacement
 Power	 Power	 Edit/Text	 Text
 Mute	 Mute	 Rec	 Rec
 TV/HMR	 TV/R	 ←	 Left
 Display	 Info	 →	 Right
 Audio	 Dual	 Source	 AV
 Subtitle	 Subt	 Favorite SEL	 Vol +
 1	 1	 Favorite Load	 Vol -
 2	 2	 EPG	 Guide
 3	 3	 DTV	 Smart
 4	 4	 Up (CH)	 Up
 5	 5	 Down (CH)	 Down
 6	 6	 Enter	 Ok
 7	 7	 Right	 Shift + Right
 8	 8	 Left	 Shift + Left
 9	 9	 Back	 Back
 0	 0	 Home	 Shift + Smart
 Goto	 Pre Ch	 Timer Rec	 Options





Original	Replacement	Original	Replacement
	Stop		Stop
	Pause		Pause
	Play		Play
	Zoom		Eject
	Red/HDD		Red
	Yellow/USB		Yellow
	Blue/LAN		Blue
	Green/DV		Green
	Tv System		Media
	Timeshift		3D
	A-B	 + 	Shift + Play
	Recall		Menu
	>>		>>
	<<		<<
	I<<		I<<
	>>I		>>I

