


 













 







 











Original	Replacement
 Aper / Chiuso	 Eject / Surround
 Video / Y	 AV / Input / RDS
 Power	 Power
 OSD	 Display / Media
 PBC	 D.Menu / Top
 Titolo	 Sound / Title
 Menu	 Menu / Home
 Ricerca	 Red / Netflix / Search
 1	 1
 2	 2
 3	 3
 Repetizione	 Green / APP / Repeat
 4	 4
 5	 5
 6	 6
 A-B RPT	 Yellow / YouTube / Repeat
 7	 7

Original	Replacement
 8	 8
 9	 9
 Prog	 TV/Radio /
 Intro	 Smart / List
 0	 0
 10+	 Guide / EPG / -/-
 Pausa	 Pause / Step / Freeze
 Info / Play	 Play / Slow
 Info / Play	 Info / Angle
 Up	 Up
 Left	 Left
 Setup	 Setup / OPT /
 Right	 Right
 Ritorno	 Back / Return
 Down	 Down
 Stop	 Stop / Hold
 < Ralent	 CH- / Page-





Original	Replacement	Original	Replacement
 Ralent I >	 CH+ / Page+		
 << F.REV	 << / Tune-		
 >> F.FWD	 >> / Tune+		
 Step	 +  Shift + Pause / Step /		
 Zoom	 ZOOM / Size		
 I << Prec	 I << / Preset-		
 >> I Succ	 >> I / Preset+		
 Sottotitoli	 EQ / Subtitle		
 NTSC/PAL	 FORMAT / Picture		
 Volume-	 VOL- / Vol-		
 Volume+	 VOL+ / Vol+		
 Sleep / Timer	 SLEEP		
 Track	 GOTO / Text		
 Audio	 LANG I/II / Audio		
 Muto	 DIMMER MUTE / Mute		

