








 




 















 

| Original  | Replacement   |
|---|---|
|  Power   |  Power                   |
|  V-Mode  |  D.Menu / Top            |
|  Mute    |  Mute / Dimmer           |
|  SAT     |  Shift + 0               |
|  SAT     |  Display / Media         |
|  TV / AV |  AV / Input / RDS        |
|  Zoom    |  Zoom / Size             |
|  Sleep   |  Sleep / Timer           |
|  1       |  1                       |
|  2       |  2                       |
|  3     |  3                     |
|  FAV   |  Fav / Marker / PC     |
|  4     |  4                     |
|  5     |  5                     |
|  6     |  6                     |
|  Pause |  Pause / Step / Freeze |
|  7     |  7                     |

| Original  | Replacement  |
|---|--|
|  8               |  8              |
|  9               |  9              |
|  Page +          |  Shift + CH+ /  |
|  TV / Radio      |  TV/Radio /     |
|  0               |  0              |
|  <-- PR          |  Back / Return  |
|  Page -          |  Shift + CH- /  |
|  Up / PR +       |  CH+ / Page+    |
|  Up / PR +       |  Up             |
|  Left / Vol -    |  Left           |
|  Left / Vol -  |  Vol-         |
|  OK / List     |  Smart / List |
|  OK / List     |  OK           |
|  Right / Vol + |  Right        |
|  Right / Vol + |  Vol+         |
|  Down / PR -   |  CH- / Page-  |
|  Down / PR -   |  Down         |





| Original  | Replacement   |
|---|---|
|    |  Menu / Home                   |
|    |  Exit / Cancel / Clear         |
|    |  Info / Angle                  |
|    |  Guide / EPG / -/--            |
|    |  Red / Netflix / Search        |
|    |  Picture / Format              |
|    |  Green / APP / Repeat          |
|    |  Text / Goto                   |
|    |  Yellow / YouTube / Repeat     |
|   |  Audio / Lang I/II            |
|  |  Blue / Prime Video / Random |
|  |  Rec / Rec Mode              |
|  |  Play / Slow                 |
|  |  Stop / Hold                 |
|  |  Setup / OPT /               |
|  |  << / Tune-                  |
|  |  >> / Tune+                  |

| Original  | Replacement   |
|---|---|
|  |  I<< / Preset- |
|  |  >>I / Preset+ |
|   |   |
|   |   |
|   |   |
|   |   |
|   |   |
|   |   |
|   |   |
|   |   |
|   |   |
|   |   |
|   |   |
|   |   |
|   |   |
|   |   |
|   |   |
|   |   |
|   |   |
|   |   |
|   |   |

