



Original	Replacement
Power	Power
Video	Shift + 4
Video	<< / Tune-
Scart	Setup / OPT /
Scart	>> / Tune+
PC	Fav / Marker / PC
PC	I<< / Preset-
TV	TV/Radio /
TV	>>I / Preset+
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8

Original	Replacement
9	9
EPG	Guide / EPG / -/-
0	0
PRE PR	Back / Return
Source	AV / Input / RDS
Aspect	Shift + Picture / Format
Dual	Audio / Lang I/II
Sleep	Sleep / Timer
Picture	Picture / Format
PR List	Smart / List
Sound	Sound / Title
Vol+	Vol+
Mute	Mute / Dimmer
P+	CH+ / Page+
Vol-	Vol-
Display	Display / Media
P-	CH- / Page-





Original	Replacement
	Menu / Home
	Exit / Cancel / Clear
	Up
	Left
	OK
	Right
	Down
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Text / Goto
	Shift + Text /
	Zoom / Size
	Eject / Surround
	Info / Angle
	Subtitle / EQ

Original	Replacement
	Stop / Hold
	D.Menu / Top

