


 







 

 







 



 



 






 
 



 





 
 










 

 















Original	Replacement	Original	Replacement
 Power	 Power	 EPG	 Guide
 Mute	 Mute	 Menu	 Menu
 TV	 Smart	 Exit	 Exit
 Tv/Rad	 TV/R	 ALT	 Pre Ch
 Audio	 Dual	 Up/Channel+	 Up
 1	 1	 Down/Channel-	 Down
 2	 2	 Right	 Right
 3	 3	 Left	 Left
 4	 4	 OK	 Ok
 5	 5	 Vol+	 Vol +
 6	 6	 Vol-	 Vol -
 7	 7	 Freeze	 Pause
 8	 8	 Browse	 Media
 9	 9	 Page+	 Ch +
 0	 0	 Page-	 Ch -
 Text	 Text	 Red	 Red
 SUB	 Subt	 Green	 Green





Original	Replacement	Original	Replacement
 Yellow	 Yellow		
 Blue	 Blue		
 White/Info	 Info		

