



Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	DTV/ATV		D.Menu / Top
	Recall		Back / Return
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	Sleep		Sleep / Timer
	Menu		Menu / Home
	Source		AV / Input / RDS
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	Exit		Exit / Cancel / Clear
	Display		Display / Media
	Vol+		Vol+
	Vol-		Vol-
	MTS		Info / Angle
	Rec List		Smart / List
	CH+		CH+ / Page+
	CH-		CH- / Page-
	FAV/List		Fav / Marker / PC
	Rec		Rec / Rec Mode





Power: **POWER**

Dimmer: **DIMMER** MUTE

Shift: **SHIFT**

Mode Buttons: **TV** **DVD** **SAT** **AUX**

Function Buttons:

- SLOW** **STEP-FREEZE** **HOLD** **REC MODE**
- TUNE-** **TUNE+** **PRESET-** **PRESET+**
- TUNE-** **TUNE+** **EQ** **SURROUND**
- SOUND** **AUDIO** **SUBTITLE** **PROGRAM**
- FORMAT** **SIZE** **TIMER** **TV/RADIO**
- PICTURE** **ZOOM** **SLEEP** **RDS**
- TOP MENU** **OPT-TOOLS** **GOTO** **AV INPUT**
- D.MENU** **SETUP** **TEXT**

Navigation Pad:

- HOME** **MENU** **INFO**
- OK**

Control Buttons:

- CLEAR** **EXIT** **CANCEL** **LIST** **SMART** **MEDIA** **DISPLAY** **RETURN** **BACK**
- +** **VOL** **-**
- +** **CH** **PAGE** **-**

Numeric Keypad:

- TV** **DVD** **CD-STD**
- 1** **2** **3**
- VIDEO** **TAPE** **TUNER**
- 4** **5** **6**
- AUX-HDD** **USB** **BLUETOOTH**
- 7** **8** **9**
- HDMI-SAT** **PC**
- GUIDE EPG** **0** **FAV MARKER**

Bottom Section:

- NETFLIX** **APP** **YouTube** **Prime Video**
- SEARCH** **REPEAT** **REPEAT A-B** **RANDOM**

Mandis SHOP

www.mandis.tv



Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	DTV/ATV		D.Menu / Top
	Recall		Back / Return
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	Sleep		Sleep / Timer
	Menu		Menu / Home
	Source		AV / Input / RDS
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	Exit		Exit / Cancel / Clear
	Display		Display / Media
	Vol+		Vol+
	Vol-		Vol-
	MTS		Info / Angle
	Rec List		Smart / List
	CH+		CH+ / Page+
	CH-		CH- / Page-
	FAV/List		Fav / Marker / PC
	Rec		Rec / Rec Mode





The image shows a black Mandis TV remote control with a variety of buttons. At the top are a power button, a dimmer/mute button, and a shift button. Below these is a grid of buttons for TV, DVD, SAT, and AUX, each with sub-functions like SLOW, STEP-FREEZE, HOLD, and REC MODE. Further down are buttons for playback controls (play, pause, stop, fast forward, rewind), audio/video settings (TUNE, TUNE+, PRESET, EQ, SURROUND), and other features like SOUND, AUDIO, SUBTITLE, PROGRAM, PICTURE, ZOOM, SLEEP, TV RADIO, TOP MENU, OPT-TOOLS, GOTO, RDS, D.MENU, SETUP, TEXT, and AV INPUT. The center features a directional pad with an OK button, flanked by MENU and INFO buttons. Below this are CLEAR, EXIT, CANCEL, LIST, SMART, MEDIA, DISPLAY, RETURN, and BACK buttons. A numeric keypad (0-9) is positioned below the center, with additional functions like VIDEO, TAPE, TUNER, AUX-HDD, USB, BLUETOOTH, GUIDE, EPG, HDMI-SAT, PC, and FAV MARKER. The bottom section includes buttons for NETFLIX, APP, YouTube, and Prime Video, along with SEARCH, REPEAT, REPEAT A-B, and RANDOM functions. The Mandis logo and website address (www.mandis.tv) are printed at the very bottom.