





































| Original   | Replacement   |
|--|---|
|  Standby      |  Power                       |
|  Mute         |  Mute / Dimmer               |
|  1            |  1                           |
|  2            |  2                           |
|  3            |  3                           |
|  4            |  4                           |
|  5            |  5                           |
|  6            |  6                           |
|  7            |  7                           |
|  8            |  8                           |
|  9           |  9                          |
|  0          |  0                         |
|  -/-        |  Shift + Guide / EPG / -/- |
|  Recall     |  Back / Return             |
|  Vol+       |  Vol+                      |
|  I/II/Audio |  Audio / Lang I/II         |
|  Auto       |  Smart / List              |

| Original  | Replacement  |
|---|--|
|  CH+                 |  CH+ / Page+            |
|  Vol-                |  Vol-                   |
|  Display             |  Display / Media        |
|  CH-                 |  CH- / Page-            |
|  Up                  |  Up                     |
|  Left                |  Left                   |
|  OK/Enter            |  OK                     |
|  Right               |  Right                  |
|  Menu                |  Menu / Home            |
|  Down                |  Down                   |
|  Exit               |  Exit / Cancel / Clear |
|  Source            |  AV / Input / RDS     |
|  P.Mode            |  Picture / Format     |
|  S.Mode            |  Sound / Title        |
|  Sleep             |  Sleep / Timer        |
|  Play/Pause / Size |  Zoom / Size          |
|  Play/Pause / Size |  Play / Slow          |





| Original  |                   | Replacement   |                             | Original |  | Replacement |  |
|---|-------------------|---|-----------------------------|----------|--|-------------|--|
|    | Play/Pause / Size |    | Pause / Step / Freeze       |          |  |             |  |
|    | Stop/Hold         |    | Stop / Hold                 |          |  |             |  |
|    | Text              |    | Text / Goto                 |          |  |             |  |
|    | Subtitle          |    | Subtitle / EQ               |          |  |             |  |
|    | <</Index          |    | << / Tune-                  |          |  |             |  |
|    | >>/Reveal         |    | >> / Tune+                  |          |  |             |  |
|    | <</Subpage        |    | << / Preset-                |          |  |             |  |
|    | >> /FAV           |    | >>  / Preset+               |          |  |             |  |
|    | >> /FAV           |    | Fav / Marker / PC           |          |  |             |  |
|    | Media             |    | Shift + Display / Media     |          |  |             |  |
|   | Rec               |   | Rec / Rec Mode              |          |  |             |  |
|  | EPG               |  | Guide / EPG / -/--          |          |  |             |  |
|  | Tv/Radio          |  | TV/Radio /                  |          |  |             |  |
|  | Red               |  | Red / Netflix / Search      |          |  |             |  |
|  | Green             |  | Green / APP / Repeat        |          |  |             |  |
|  | Yellow            |  | Yellow / YouTube / Repeat   |          |  |             |  |
|  | Blue              |  | Blue / Prime Video / Random |          |  |             |  |

