 
 




 

 
 
 






Original	Replacement
 Power	 Power
 A-B	 3D
 Clear	 Exit
 Open/Close	 Eject
 Time	 AV
 Resume	 Info
 Prog	 Sleep
 Audio	 Dual
 Subtitle	 Subt
 Zoom	 Shift + Eject
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7

Original	Replacement
 8	 8
 9	 9
 0/10	 0
 10+	 Guide
 Ran	 TV/R
 OSD	 Format
 Return	 Back
 Repeat	 Text
 Slow	 Green
 Menu	 Menu
 Angle	 Red
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Surround	 Yellow
 L/R	 Smart
 Setup	 Options





Original		Replacement		Original		Replacement	
	Up		Up				
	Down		Down				
	Right		Right				
	Left		Left				
	Enter		Ok				
	Stop		Stop				
	Play		Play				
	I<<		I<<				
	>>I		>>I				
	N/P		Media				
	<<		<<				
	>>		>>				
	Pause/Step		Pause				
	PBC		D. Menu				
	Title		List				

