



| Original | Replacement |
|------------------|----------------|
| Power On | Power |
| Power Off | Shift + Power |
| Power DVD/VDP | Shift + 4 |
| Power VCR | Shift + 6 |
| Power TV | TV/R |
| Mode | Red |
| Mode Cinema | Green |
| Mode Music | Yellow |
| Mode DSP SIM. | Blue |
| Mode Direct | Shift + Red |
| Mode Stereo | Shift + Green |
| Virtual Surround | Shift + Yellow |
| Mode 5CH/6CH | Shift + Blue |
| Tuning+ | Shift + >> |
| Tv Vol+ | Shift + Vol + |
| Tuning- | Shift + << |
| Tv Vol- | Shift + Vol - |

| Original | Replacement |
|-------------------------------|--------------|
| Channel+ | Ch + |
| Tv CH+ | Shift + Ch + |
| Channel- | Ch - |
| Tv CH- | Shift + Ch - |
| Input CD | 2 |
| Input Tuner | 3 |
| Input DVD / VDP | 4 |
| Input TV/BDS | 5 |
| Input VCR-1 | 6 |
| Input V.AUX | 8 |
| Input CDR / Tape | 9 |
| Input AUX | 7 |
| Mode | Options |
| Memory | Smart |
| Band | Media |
| Shift | 3D |
| Play CD/MD/CDR-DVD/ VDP | Play |





| Original | Replacement |
|--|--|
|  Stop CD/MD/CDR-DVD/ |  Stop |
|  I<< CD/MD/CDR-DVD/ |  I<< |
|  >>I CD/MD/CDR-DVD/ |  >>I |
|  << CD/MD/CDR-DVD/ |  << |
|  >> CD/MD/CDR-DVD/ |  >> |
|  Pause CD/MD/CDR-DVD/ |  Pause |
|  Disc Skip+ CD/MD/CDR-DVD/ |  LIST List |
|  Vol+ CD/MD/CDR-DVD/ |  + VOL Vol + |
|  Vol- CD/MD/CDR-DVD/ |  - VOL Vol - |
|  Muting |  MUTE Mute |
|  Setup |  E-MANUAL D.MENU D. Menu |
|  Surround |  AD SUBT Subt |
|  Menu |  TOP MENU MENU Menu |
|  Up |  Up |
|  Left |  Left |
|  CH Select |  SHIFT + OK Shift + Ok |
|  Enter |  OK Ok |

| Original | Replacement |
|--|---|
|  Right |  Right |
|  Down |  Down |
|  Display |  INFO Info |
|  On Screen |  SHIFT + INFO Shift + Info |
|  Surround Back |  BACK Back |
|  Return |  SHIFT + BACK Shift + Back |
|  Test Tone |  REPEAT TEXT Text |
|  Video Select |  PICTURE FORMAT Format |
|  Dimmer |  PROG SLEEP Sleep |
|  Speaker |  SOUND DUAL Dual |
|  Input Mode |  -/-- GUIDE Guide |
|  Input Analog |  0 0 |
|  Input Ext-In |  FAV PRE-CH Pre Ch |

