


 


 
 


 
 
 



 













 



 




 

 

 

 
 

 
 


 



 
 


 
 
 








Original	Replacement	Original	Replacement
 Power	 Power	 Up / CH +	 Up
 Mute	 Mute	 Down / CH -	 Ch -
 1	 1	 Down / CH -	 Down
 2	 2	 Right / Vol +	 Vol +
 3	 3	 Right / Vol +	 Right
 4	 4	 Left / Vol -	 Left
 5	 5	 Left / Vol -	 Vol -
 6	 6	 OK	 Ok
 7	 7	 Sub-T.	 Subt
 8	 8	 Info	 Info
 9	 9	 Text	 Text
 0	 0	 Audio	 Dual
 Menu	 Menu	 EPG	 Guide
 Last	 Back	 Favor	 Pre Ch
 TV / R	 TV/R	 Red / I<<	 I<<
 Exit	 Exit	 Red / I<<	 Red
 Up / CH +	 Ch +	 Green / <<	 <<





Original	Replacement
Green / <<	Green
Yellow / >>	>>
Yellow / >>	Yellow
Blue / >>	Blue
Blue / >>	>>
USB	Media
Rec / Goto	Rec
Stop	Stop
Play / Pause	Pause
Play / Pause	Play

Original	Replacement

