








Original	Replacement	Original	Replacement
 Power	 Power	 Yellow	 Yellow / YouTube / Repeat
 Source	 AV / Input / RDS	 Menu	 Menu / Home
 Picture	 Picture / Format	 0	 0
 Sound	 Sound / Title	 Exit	 Exit / Cancel / Clear
 Still	 Pause / Step / Freeze	 Blue	 Blue / Prime Video / Random
 Mute	 Mute / Dimmer	 Up	 Up
 1	 1	 Left	 Left
 2	 2	 OK	 OK
 3	 3	 Right	 Right
 Red	 Red / Netflix / Search	 Down	 Down
 4	 4	 CH -	 CH- / Page-
 5	 5	 CH +	 CH+ / Page+
 6	 6	 Vol -	 Vol-
 Green	 Green / APP / Repeat	 Vol +	 Vol+
 7	 7	 Guide / Size	 Guide / EPG / -/--
 8	 8	 Index / Subtitle	 Subtitle / EQ
 9	 9	 Sleep	 Sleep / Timer

Original	Replacement	Original	Replacement
 Power	 DIMMER MUTE	 Yellow	 SHIFT
 Source	 TV DVD SAT AUX	 Menu	 REC MODE
 Picture	 SLOW STEP - FREEZE HOLD	 0	 PRESET+
 Sound	 TUNE+ TUNE-	 Exit	 PRESET-
 Still	 TITLE LANG UI EQ SURROUND	 Blue	 SOUND AUDIO SUBTITLE
 Mute	 FORMAT SIZE TIMER PROGRAM	 Up	 PICTURE ZOOM SLEEP
 1	 TOP MENU OPT-TOOLS GOTO	 Left	 TV RADIO
 2	 D.MENU SETUP TEXT	 OK	 RDS AV INPUT
 3	 HOME MENU	 Right	 ANGLE INFO
 Red	 MENU	 Down	 RETURN BACK
 4	 CLEAR EXIT	 CH -	 CANCEL
 5	 LIST	 CH +	 SMART
 6	 SMART MEDIA DISPLAY	 Vol -	 CH PAGE +
 Green	 TV DVD CD - STB	 Vol +	 MEDIA DISPLAY
 7	 VIDEO TAPE TUNER	 Guide / Size	 TV DVD CD - STB
 8	 AUX - HDD	 Index / Subtitle	 VIDEO TAPE TUNER
 9	 USB	 Sleep	 AUX - HDD
	 BLUETOOTH		 USB
	SEARCH REPEAT REPEAT A-B RANDOM		BLUETOOTH





Original	Replacement
 Text	 Text / Goto
 FAV / Sub Code	 Fav / Marker / PC
 TV / Reveal	 TV/Radio /
 Comp / Mix	 Display / Media
 Language	 Audio / Lang I/II
 Cancel	 Shift + Exit / Cancel / Clear
 Info	 Info / Angle
 Recall	 Back / Return
 Zoom	 Zoom / Size
 I / II	 Shift + Audio / Lang I/II

Original	Replacement

