











 







 



 



 



 









 
 








 




















 


 









 









Original		Replacement		Original		Replacement	
	Power		Power		Recall		Back / Return
	Mute		Mute / Dimmer		Vol -		Vol-
	V.Format		Shift + Picture / Format		Vol +		Vol+
	Sleep		Sleep / Timer		CH -		CH- / Page-
	Text		Text / Goto		CH +		CH+ / Page+
	TV / Radio		TV/Radio /		Menu		Menu / Home
	1		1		Up		Up
	2		2		Exit		Exit / Cancel / Clear
	3		3		Left		Left
	4		4		OK		OK
	5		5		Right		Right
	6		6		Page Down		Shift + CH- /
	7		7		Down		Down
	8		8		Page Up		Shift + CH+ /
	9		9		FAV		Fav / Marker / PC
	[[≡]]		Smart / List		Guide		Guide / EPG / -/-
	0		0		Info		Info / Angle





Original	Replacement
	 Display / Media
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Audio / Lang I/II
	 Blue / Prime Video / Random
	 Subtitle / EQ
	 Play / Slow
	 Stop / Hold
	 Pause / Step / Freeze
	 Rec / Rec Mode
	 Shift + Text /
	 Shift + Pause / Step /
	 << / Tune-
	 >> / Tune+
	 Zoom / Size
	 Shift + Stop /

Hold

Original	Replacement
	 I<< / Preset-
	 >>I / Preset+
	 Shift + 0
	 Picture / Format
	 Setup / OPT /
	 Shift + Setup / OPT / Tools

