
 





 





 


 



 

 


 
 





 


 







 
 
 

Original	Replacement
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Radio / AV	 TV/R
 Lang / -/--	 Dual
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 CH+	 Ch +

Original	Replacement
 CH-	 Ch -
 Info	 Info
 EPG	 Guide
 Up	 Up
 Left	 Left
 Right	 Right
 Down	 Down
 Exit	 Exit
 Yellow / Pause	 Yellow
 Blue / >>	 Blue
 @ / Stop	 Smart
 @ / Stop	 Stop
 Rec / [ ]	 Rec








 

 




Original	Replacement	
PWR On/Off		Power
Mute		Mute
Epg	 + 	Shift + Guide
App		Media
Info		Info
TV		TV/R
Text		Text
Menu		Menu
Menu Up		Up
Display	 + 	Shift + Info
Menu Left		Left
OK Enter		Ok
Menu Right		Right
Exit		Exit
Menu Down		Down
Back		Back
Volume+		Vol +

Original	Replacement	
CH/Page+		Ch +
Volume-		Vol -
CH/Page-		Ch -
1. ?		1
2abc		2
3def		3
4ghi		4
5jkl		5
6mno		6
7pqrm		7
8tuv		8
9wxyz		9
Guide Pilote		Guide
0/10		0
FAV Pref.		Pre Ch
Red		Red
Green		Green





Original	Replacement	Original	Replacement
Yellow	 Yellow		
Blue	 Blue		
Freeze	 Stop		
Dec/Pause	 Pause		
East	 +  Shift + Red		
Lang./Rewind	 Dual		
H/V Play	 +  Shift + Yellow		
LNB F.Forward	 +  Shift + Blue		

Original	Replacement

