



Original		Replacement		Original		Replacement	
	DVD / TV / AV		Power		Down / CH-		Down
	1		1		Down / CH-		Ch -
	2		2		Right / Vol+		Right
	3		3		Right / Vol+		Vol +
	4		4		Left / Vol-		Left
	5		5		Left / Vol-		Vol -
	6		6		OK		Ok
	7		7		Pg Up		Shift + Ch +
	8		8		Pg Dn		Shift + Ch -
	9		9		Title		Smart
	0		0		Info		Info
	Mute		Mute		Goto / FAV		Pre Ch
	Repeat / TV/Radio		TV/R		Audio		Dual
	Repeat / TV/Radio		Shift + Text		Sub-T		Subt
	Exit		Exit		Zoom / TTX		Text
	Up / CH+		Up		Zoom / TTX		Eject
	Up / CH+		Ch +		Setup		Options





Original	Replacement	Original	Replacement
 Menu / EPG	 Menu		
 Menu / EPG	 Guide		
 USB	 Media		
 Play / Pause	 Play		
 Play / Pause	 Pause		
 Stop	 Stop		
 Copy/Delete / Rec	 Rec		
 Red / <<<	 Red		
 Red / <<<	 <<<		
 Green / >>>	 Green		
 Green / >>>	 >>>		
 Yellow / I<<<	 Yellow		
 Yellow / I<<<	 I<<<		
 Blue / >>>I	 >>>I		
 Blue / >>>I	 Blue		

