


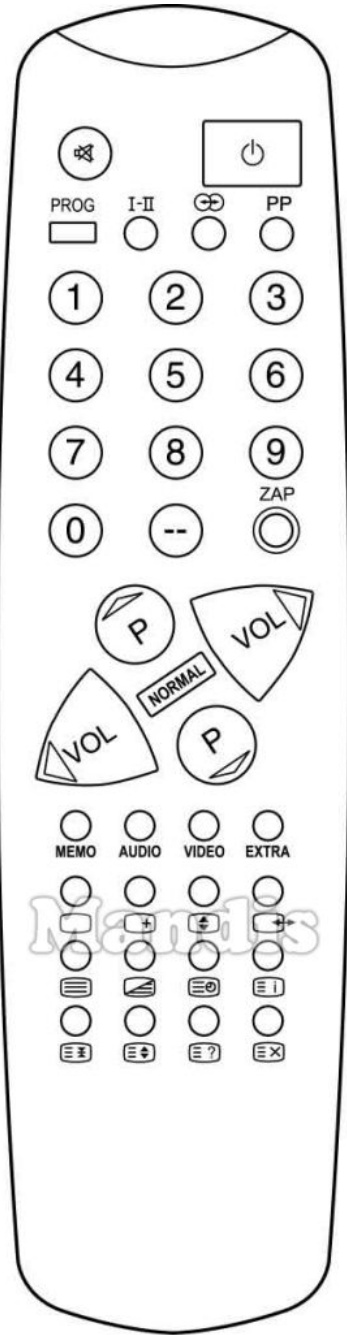






















Original		Replacement		Original		Replacement	
	Mute		Mute / Dimmer		ZAP		Smart / List
	Power		Power		Up / P+		Up
	Prog		TV/Radio /		Up / P+		CH+ / Page+
	I-II		Audio / Lang I/II		Right / Vol+		Right
	O to O		Sound / Title		Right / Vol+		Vol+
	PP		Back / Return		Left / Vol-		Left
	1		1		Left / Vol-		Vol-
	2		2		Normal		OK
	3		3		Down / P-		Down
	4		4		Down / P-		CH- / Page-
	5		5		Red / Memo		Red / Netflix / Search
	6		6		Green / Audio		Green / APP / Repeat
	7		7		Green / Audio		Shift + Audio / Lang I/II
	8		8		Yellow / Video		Yellow / YouTube / Repeat
	9		9		Blue / Extra		Blue / Prime Video / Random
	0		0		[]		Display / Media
	--		Guide / EPG / --		[+]		Stop / Hold





	Original	Replacement	
	[♦]	 Setup / OPT /	
	[]↔	 D.Menu / Top	
	[≡]	 Text / Goto	
	[/ ≡]	 +  Shift + Text /	
	[≡ ⊕]	 Subtitle / EQ	
	[≡ i]	 Info / Angle	
	[≡ □]	 Pause / Step / Freeze	
	[≡ ♦]	 Zoom / Size	
	[≡ ?]	 AV / Input / RDS	
	[≡ X]	 Exit / Cancel / Clear	

	Original	Replacement

