

 


 

 

 




 
 
 




 

 
 


 



 

 

 
 
 

 
 
 
 
 

 

 



 
 
 





 
 


 
 







	Original	Replacement	Original	Replacement
	 Power	 Power	 Right / Vol +	 Vol +
	 SUB-T	 Subt	 Left / Vol -	 Left
	 Lang	 Dual	 Left / Vol -	 Vol -
	 Mute	 Mute	 OK	 Ok
	 EPG	 Guide	 FAV	 Pre Ch
	 Goto	 Smart	 TV / Radio	 TV/R
	 Page +	 Shift + Ch +	 Recall	 Back
	 Page -	 Shift + Ch -	 Info	 Info
	 TTX	 Text	 1	 1
	 Repeat	 Shift + Text	 2	 2
	 Menu	 Menu	 3	 3
	 Exit	 Exit	 4	 4
	 Up / CH +	 Up	 5	 5
	 Up / CH +	 Ch +	 6	 6
	 Down / CH -	 Down	 7	 7
	 Down / CH -	 Ch -	 8	 8
	 Right / Vol +	 Right	 9	 9



 
 


 

















 


 
 


 
 
 

 


 



 



 





 

 



 













Original	Replacement	Original	Replacement
 0	 0		
 <<<	 <<<		
 >>>	 >>>		
 I<<<	 I<<<		
 >>I	 >>I		
 Play	 Play		
 Pause / Timeshift	 Pause		
 Stop	 Stop		
 Rec	 Rec		
 Red / PVR	 Red		
 Green / V-Format	 Green		
 Green / V-Format	 Format		
 Yellow / Aspect	 Yellow		
 Yellow / Aspect	 3D		
 Blue / Timer	 Blue		




 




 






Original		Replacement		Original		Replacement	
	Power		Power		OK		Ok
	Mute		Mute		FAV		Pre Ch
	EPG		Guide		TV / Radio		TV/R
	Info		Info		Text		Text
	Audio		Dual		Goto		Smart
	Recall		Back		1		1
	Subtitle		Subt		2		2
	Menu		Menu		3		3
	Exit		Exit		4		4
	Up / CH +		Up		5		5
	Up / CH +		Ch +		6		6
	Down / CH -		Down		7		7
	Down / CH -		Ch -		8		8
	Right / Vol +		Right		9		9
	Right / Vol +		Vol +		0		0
	Left / Vol -		Left		USB		Media
	Left / Vol -		Vol -		Rec		Rec





Original	Replacement	Original	Replacement
 Stop	 Stop		
 Play / Pause	 Play		
 Play / Pause	 Pause		
 <<	 <<		
 >>	 >>		
  <<	  <<		
 >>	 >>		
 ---	 Shift + 1		
 ---	 Shift + 2		
 ---	 Shift + 3		
 Red	 Red		
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		

