 

 



 





















 

 

























 















Original	Replacement	Original	Replacement
 Power	 Power	 CH.List	 CH.List
 Info	 Info / Angle	 [=]	 D.Menu / Top
 Input	 AV / Input / RDS	 Up	 Up
 [++]	 Setup / OPT /	 Colors	 Fav / Marker / PC
 [1]	 Picture / Format	 Left	 Left
 [2]	 Zoom / Size	 OK	 OK
 1	 1	 Right	 Right
 2	 2	 Back	 Back / Return
 3	 3	 Down	 Down
 4	 4	 Play	 Play / Slow
 5	 5	 Pause	 Pause / Step / Freeze
 6	 6	 Vol+	 Vol+
 7	 7	 Home	 Menu / Home
 8	 8	 CH+ / Page+	 CH+ / Page+
 9	 9	 Vol-	 Vol-
 Guide	 Guide / EPG / -/--	 Mute	 Mute / Dimmer
 0	 0	 CH- / Page-	 CH- / Page-





Original		Replacement		Original		Replacement	
	TXT		Text / Goto				
	Voice		Audio / Lang I/II				
	Sub.		Subtitle / EQ				
	Netflix		Red / Netflix / Search				
	YouTube		Yellow / YouTube / Repeat				
	Prime Video		Blue / Prime Video / Random				
	Rakuten Tv		TV/Radio /				

