








 


 



 






Original	Replacement	Original	Replacement
 Power	 Power	 Still	 Pause
 Mute	 Mute	 S.Mode	 Shift + Dual
 1	 1	 Sleep	 Sleep
 2	 2	 Volume+	 Vol +
 3	 3	 Volume-	 Vol -
 4	 4	 Channel+	 Ch +
 5	 5	 Channel-	 Ch -
 6	 6	 PIP On/Off	 Smart
 7	 7	 Source	 Shift + AV
 8	 8	 Size	 Eject
 9	 9	 Swap	 Back
 0	 0	 Up / P-CH +	 Up
 -/--	 Guide	 Down / P-CH -	 Down
 Preview	 Pre Ch	 Right	 Right
 Sound	 Dual	 Left	 Left
 Picture	 Shift + Format	 Menu	 Menu
 Aspect	 Format	 Menu	 Ok

Original	Replacement	Original	Replacement
 Power	 Power	 TV	 DVD
 Mute	 Mute	 SAT	 AUX
 1	 1	 Play Mode	 Rec Mode
 2	 2	 Dual	 Subt
 3	 3	 Sound	 AD
 4	 4	 Sleep	 Picture
 5	 5	 E-Manual	 Eco
 6	 6	 Repeat	 Timer
 7	 7	 Zoom	 AV
 8	 8	 D.Menu	 Text
 9	 9	 Top Menu	 Display Info
 0	 0	 Menu	 OK
 -/--	 Guide	 Clear	 Return Back
 Preview	 Pre Ch	 Exit	 Home Smart
 Sound	 Dual	 Vol +	 App Media
 Picture	 Shift + Format	 Vol -	 Ch +
 Aspect	 Format	 1	 2
		 2	 3
		 3	 4
		 4	 5
		 5	 6
		 6	 7
		 7	 8
		8	9
		9	0
		0	Fav
		0	Pre-Ch
		A	B
		B	C
		C	D
		D	





Original	Replacement
 Exit	 Exit
 TV / AV	 AV
 Info	 Info
 Wiper	 Media
 PC Auto	 Options
 TTX On/Off	 Text
 TTX / Mix	 Shift + Text
 Index	 Shift + Info
 List / FLOF	 Shift + Smart
 Store	 TV/R
 Hold	 Stop
 Reveal	 Shift + Subt
 Subpage	 Subt
 Size	 Shift + Eject
 Red	 Red
 Green	 Green
 Yellow	 Yellow

Original	Replacement
 Blue	 Blue

