



Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK/Select		Ok
	M		Menu
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Guide
	Exit		Exit
	P<P/Swap		Pre Ch
	Vol+		Vol +
	Vol-		Vol -
	P+		Ch +
	P-		Ch -
	PP		Eject
	I-II		Dual
	Tv/DTV		TV/R
	[≡]		Text
	[≡0]		Options
	AV/Source		AV
	[≡+]/[X]		Format
	[≡X]/[■]		3D
	[.≡]/[■]		Subt





Original		Replacement		Original		Replacement	
	[≡◆]	APP MEDIA	Media				
	[≡?]	RETURN BACK	Back				
	[≡i]	DISPLAY INFO	Info				
WIDE	Red/[+]/Wide/↑	A	Red				
	Green/↓	B	Green				
	Yellow	C	Yellow				
GUIDE	Blue/Guide	D	Blue				
	[i]	E-MANUAL D.MENU	D. Menu				

