



Original	Replacement		
	Power		Power
			Picture / Format
	Back		Back / Return
	Menu		Menu / Home
	Up		Up
	Left		Left
	Ok		OK
	Right		Right
	Down		Down
	Exit		Exit / Cancel / Clear
	Stop		Stop / Hold
	Smart Tv		Smart / List
	Skip Prev.		I<< / Preset-
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Skip Next		>>I / Preset+
	Ch+		CH+ / Page+

Original	Replacement		
	Vol-		Vol-
	Vol+		Vol+
	Ch-		CH- / Page-
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue/00/Lang.		Blue / Prime Video / Random
	Mute		Mute / Dimmer
	Rec		Rec / Rec Mode
	Source		AV / Input / RDS
	Option		Setup / OPT /
	Subt.		Subtitle / EQ
	IPTV		Display / Media
	Eco / Search		Fav / Marker / PC
	Guide-Popup		Guide / EPG / -/-
	Ch.List		Shift + Smart / List
	Info		Info / Angle









 
 
 
 



 

 


 
 



 




Original	Replacement	Original	Replacement
1	TV 1		
2 ARC	DVD 2		
3 DEF	CD - STB 3		
4 DISC	VIDEO 4		
5 INCL	TAPE 5		
6 MENU	TUNER 6		
7 POPS	AUX - HDD 7		
8 TVV	USB 8		
9 WXYZ	BLUETOOTH 9		
DISC MENU	TOP MENU D.MENU		
0	HDMI - BAT 0		
TEXT MEDIA CENTER	GOTO TEXT		
SOUND	TITLE SOUND		
Repeat	SIZE ZOOM		
Repeat	SHIFT + APP REPEAT		

Original	Replacement





Original	Replacement	Original	Replacement
	Power		Power
	(•J)		TV/Radio /
	Back		Back / Return
	Menu		Menu / Home
	Up		Up
	Left		Left
	Ok		OK
	Right		Right
	Down		Down
	Exit		Exit / Cancel / Clear
	Stop		Stop / Hold
	Smart Tv		Smart / List
	Skip Prev.		I<< / Preset-
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Skip Next		>>I / Preset+
	Ch+		CH+ / Page+

Original	Replacement	Original	Replacement
	Vol-		Vol-
	Vol+		Vol+
	Ch-		CH- / Page-
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue/00/Lang.		Blue / Prime Video / Random
	Mute		Mute / Dimmer
	Rec		Rec / Rec Mode
	Source		AV / Input / RDS
	Option		Setup / OPT / EQ
	Subt.		Subtitle / EQ
	Iptv		Display / Media
	Eco/Search		Fav / Marker / PC
	Guide/ Popup		Guide / EPG / -/--
	Ch.List		Shift + Smart / List
	Info		Info / Angle





Original	Replacement	Original	Replacement
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Disc Menu		D.Menu / Top
	0		0
	Text/ Media		Text / Goto
	Sound		Sound / Title
	Repeat	+	Shift + Green / APP /

Original	Replacement

