

 

 

 



 

 



 

 















 

 

 





 

 





 

 

 









 





Original	Replacement	Original	Replacement
 Power	 Power	 9	 9
 Sleep	 Sleep / Timer	 Stop/Exit/Cancel	 Exit / Cancel / Clear
 Mute	 Mute / Dimmer	 Stop/Exit/Cancel	 Stop / Hold
 Mode	 AV / Input / RDS	 -/--	 Guide / EPG / -/--
 1	 1	 0	 0
 2	 2	 Back	 Back / Return
 3	 3	 SYS Menu	 Menu / Home
 Eject/Nicam2	 Eject / Surround	 Rec	 Rec / Rec Mode
 Eject/Nicam2	 Sound / Title	 Up	 Up
 4	 4	 CH+	 CH+ / Page+
 5	 5	 DTV/Radio	 TV/Radio /
 6	 6	 Left	 Left
 TXT/MIX	 Text / Goto	 Enter	 OK
 Play/Pause	 Play / Slow	 Right	 Right
 Play/Pause	 Pause / Step / Freeze	 Vol-	 Vol-
 7	 7	 Down	 Down
 8	 8	 CH-	 CH- / Page-





Original	Replacement	Original	Replacement
	Vol+		Shift + Green / APP / Repeat
	Return		Yellow / YouTube / Repeat
	Menu DVD		Blue / Prime Video / Random
	Setup		Shift + Yellow / YouTube / Repeat A-B
	Display		Shift + Stop / HOLD
	Search/FAV		<< / Tune-
	Search/FAV		>> / Index
	Slow/EPG		I<< / Size
	Slow/EPG		I<< / Size
	Language/Info		>>I / Reveal
	Language/Info		Subtitle
	Zoom/List		Title/Subpage
	Zoom/List		Shift + Sound / Title
	Red/Angle		Shift + Down
	Red/Angle		Shift + Up
	Red/Angle		
	Green/Program		
	Green/Program		

