



Original	Replacement	Original	Replacement
Power Audio	Power	>10	Pre Ch
Display/Chara	Info	10	Guide
Tv/Video	TV/R	Karaoke Scoring	Shift + Smart
Level Meter	Media	Reserve	Shift + Options
Motion Sensor	Smart	Vocal Masking	Shift + Dual
Title/Del	Options	Vocal Support	Shift + Subt
Eco/Dimmer	Shift + 3D	Menu/PL	Menu
1/Mark	1	Top Menu/PG	Shift + Menu
2	2	On Screen	Shift + Info
3	3	Fade Muting	Mute
4	4	Up/PTY+	Up
5	5	Down/PTY-	Down
6	6	Right/TA/News/Inf	Right
7	7	Left/PTY Search	Left
8	8	Audio Vol+	Vol +
9	9	Audio Vol-	Vol -
0	0	Sleep	Sleep










 








 

 

 







Original	Replacement	Original	Replacement
A.Stby	Shift + 0	Audio/MPX	Dual
Clock/Timer	AV	Subtitle	Subt
Return	Back	Zoom	Eject
Cancel	Exit	Tuner/Audio In	Text
Set Up	D. Menu	File Type	Shift + TV/R
Stop	Stop	Repeat	Shift + Text
Play	Play	VFP/Scan Mode	Format
Pause	Pause	3D Phonic/HP Surr	3D
←/Tuner/Play	Shift + Back	C.Voice	Shift + List
I<<	I<<	DVD/Audio In	Shift + Format
>>I	>>I	Sound Mode	List
<<	<<	My Sound	Shift + Mute
>>	>>	V.Bass	Shift + 7
Play/Pause	Blue	Super Bass	Ch +
Play/Pause USB	Yellow	Super Bass Level-	Ch -
Play/Pause iPod A	Red	Mic Vol+	Shift + Right
Play/Pause iPod B	Green	Mic Vol-	Shift + Left





Original	Replacement	Original	Replacement
 Karaoke Setting	 Shift + 9		
 Mic Mix	 Shift + 8		
 Power Tv	 Shift + Power		
 Repeat A-B	 Shift + Play		
 Angle	 Shift + 2		
 Tv Channel+	 Shift + Ch +		
 Tv Channel-	 Shift + Ch -		
 Tv Vol+	 Shift + Vol +		
 Tv Vol-	 Shift + Vol -		
 I<< Group/Title Skip	 Shift + I<<		
 Group/Title Skip >>I	 Shift + >>I		
 >> Group/Title	 Shift + 6		
 Enter/Set	 Ok		

