
 
 
 






 






 


 


 



 



 

 


 








Original	Replacement	Original	Replacement
 OP/CL	 Eject / Surround	 Angle	 Info / Angle
 Source	 AV / Input / RDS	 Audio	 Audio / Lang I/II
 Power	 Power	 Menu	 Menu / Home
 1	 1	 Up / CH+	 Up
 2	 2	 Up / CH+	 CH+ / Page+
 3	 3	 Setup	 Setup / OPT /
 4	 4	 Left	 Left
 5	 5	 Enter	 OK
 6	 6	 Right	 Right
 7	 7	 Rev	 << / Tune-
 8	 8	 Down / CH-	 Down
 9	 9	 Down / CH-	 CH- / Page-
 0	 0	 Next	 >> / Preset+
 10+	 Guide / EPG / -/-	 Fwd	 >> / Tune+
 Auto Scan	 Sleep / Timer	 Prev	 << / Preset-
 Title / Text	 Sound / Title	 Vol-	 Vol-
 Subtitle	 Subtitle / EQ	 Play/Pause	 Play / Slow





	Original	Replacement		Original	Replacement
	Play/Pause	Pause / Step / Freeze		Prog / EPG	+ Shift + Guide / EPG / -/-
	Vol+	Vol+		V.Mode	+ Shift + 4
	Stop	Stop / Hold		V.Mode	Picture / Format
	Resume	Rec / Rec Mode		Step	+ Shift + Pause / Step /
	Zoom	Zoom / Size		A-B	+ Shift + Yellow / YouTube /
	Mute	Mute / Dimmer			
	Red / Clear	Exit / Cancel / Clear			
	Red / Clear	Red / Netflix / Search			
	Green / Ran	Green / APP / Repeat			
	Yellow / PBC	Yellow / YouTube / Repeat			
	Blue / Repeat	+ Shift + Green / APP /			
	Blue / Repeat	Blue / Prime Video / Random			
	OSD	Display / Media			
	N/P	Text / Goto			
	Slow	+ Shift + Play /			
	Return	Back / Return			
	Prog / EPG	TV/Radio /			

