



| Original | Replacement | Original | Replacement |
|---|--|---|--|
|  Power |  Power |  Green / Slow |  Green |
|  I<< |  I<< |  Yellow / Repeat |  Yellow |
|  >>I |  >>I |  Blue / A-B |  Blue |
|  << |  << |  CH + |  Ch + |
|  >> |  >> |  CH - |  Ch - |
|  Eject |  Eject |  TV Menu |  Menu |
|  Play / Pause |  Play |  Source |  AV |
|  Play / Pause |  Pause |  Vol + |  Vol + |
|  Stop |  Stop |  Vol - |  Vol - |
|  TV/TXT / |  Text |  DTV |  Smart |
|  Cancel / Zoom |  Shift + Eject |  DVD-Setup |  D. Menu |
|  Reveal / Subtitle |  Shift + Subt |  Up |  Up |
|  Hold / Menu |  Options |  Down |  Down |
|  Size / Angle |  Format |  Right |  Right |
|  Subpage / Title |  Shift + Text |  Left |  Left |
|  Index / Goto |  Media |  OK |  Ok |
|  Red / Program |  Red |  Exit |  Exit |





| Original | Replacement |
|----------|----------------|
| Display | Shift + Info |
| 1 | 1 |
| 2 | 2 |
| 3 | 3 |
| 4 | 4 |
| 5 | 5 |
| 6 | 6 |
| 7 | 7 |
| 8 | 8 |
| 9 | 9 |
| 0 | 0 |
| F-- | Shift + Guide |
| Recall | Back |
| Picture | Shift + Format |
| Sound | Dual |
| Nicam/A2 | Shift + AV |
| Mute | Mute |

| Original | Replacement |
|--------------|-------------|
| Sleep | Sleep |
| Info | Info |
| Subtitle | Subt |
| Channel List | List |
| EPG | Guide |
| TV / Radio | TV/R |
| FAV | Pre Ch |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

