















 








 








Original	Replacement	Original	Replacement
 Power	 Power	 Rec	 Rec
 D/A Input	 Smart	 I<<	 I<<
 Tv/Radio	 TV/R	 <<	 <<
 Input	 AV	 >>	 >>
 Bright+	 Shift + Right	 >>I	 >>I
 Bright-	 Shift + Left	 Exit	 Exit
 Simplink	 Media	 Back	 Back
 Text	 Text	 Menu	 Menu
 Ratio	 Format	 Info	 Info
 I/II	 Dual	 Guide	 Guide
 Red	 Red	 Up	 Up
 Green	 Green	 Down	 Down
 Yellow	 Yellow	 Right	 Right
 Blue	 Blue	 Left	 Left
 Stop	 Stop	 OK	 Ok
 Play	 Play	 Vol+	 Vol +
 Pause	 Pause	 Vol-	 Vol -





Original	Replacement	Original	Replacement
 MUTE	MUTE Mute	 [≡i]/Index	 D. Menu
 FAV	FAV Pre Ch	 [≡o]/Time	 Shift + Exit
 PR+	+ CH Ch +	 Sleep	 Sleep
 PR-	CH Ch -	 [≡+]/Hold	 3D
 1	1 1	 [≡?]/Reveal	 Eject
 2	2 2	 Subtitle	 Subt
 3	3 3		
 4	4 4		
 5	5 5		
 6	6 6		
 7	7 7		
 8	8 8		
 9	9 9		
 0	0 0		
 List	 List		
 Q.View	 Options		
 [≡x]/Update	 Shift + TV/R		

Original	Replacement	Original	Replacement
 MUTE	MUTE Mute	 [≡i]/Index	 D. Menu
 FAV	FAV Pre Ch	 [≡o]/Time	 Shift + Exit
 PR+	+ CH Ch +	 Sleep	 Sleep
 PR-	CH Ch -	 [≡+]/Hold	 3D
 1	1 1	 [≡?]/Reveal	 Eject
 2	2 2	 Subtitle	 Subt
 3	3 3		
 4	4 4		
 5	5 5		
 6	6 6		
 7	7 7		
 8	8 8		
 9	9 9		
 0	0 0		
 List	 List		
 Q.View	 Options		
 [≡x]/Update	 Shift + TV/R		












 



 



 


 


















	Original	Replacement		Original	Replacement
	Power		Power		4
	Stop		Stop		5
	Play		Play		6
	Pause		Pause		7
	I<<		I<<		8
	<<		<<		9
	>>		>>		0
	>>I		>>I		
	Menu		Menu		
	Up		Up		
	Down		Down		
	Right		Right		
	Left		Left		
	OK		Ok		
	1		1		
	2		2		
	3		3		





	Original	Replacement		Original	Replacement
	Power		Power		8
	Input		AV		9
	Stop		Stop		0
	Play		Play		
	Pause		Pause		
	Rec		Rec		
	<<		<<		
	>>		>>		
	PR+		Ch +		
	PR-		Ch -		
	1		1		
	2		2		
	3		3		
	4		4		
	5		5		
	6		6		
	7		7		

