













 


 


 




 


 









Original	Replacement
 Power	 Power
 Power Tv	 Shift + Power
 DVD	 Shift + 2
 VCR	 Shift + 4
 Eject/Open-Close	 Eject / Surround
 AV/Input Tv	 Shift + AV / Input / RDS
 1	 1
 2	 2
 3	 3
 PR/CH+ Tv	 Shift + CH+ /
 4	 4
 5	 5
 6	 6
 PR/CH- Tv	 Shift + CH- /
 7	 7
 8	 8
 9	 9

Original	Replacement
 Vol+ Tv	 Vol+
 Clear	 Exit / Cancel / Clear
 0	 0
 AV/Input	 AV / Input / RDS
 Vol- Tv	 Vol-
 <<	 << / Tune-
 >>	 >> / Tune+
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Pause/Step	 Pause / Step / Freeze
 Play	 Play / Slow
 Stop	 Stop / Hold
 Home	 Menu / Home
 Up	 Up
 PR/CH/TRK+	 CH+ / Page+
 Disc Menu/List	 D.Menu / Top
 Disc Menu/List	 Smart / List



