



Original	Replacement	Original	Replacement
 Power	 Power	 Text	 Text / Goto
 Eject	 Eject / Surround	 Subtitle	 Subtitle / EQ
 Tv/Radio	 TV/Radio /	 1	 1
 Media	 Shift + Display / Media	 2	 2
 Play	 Play / Slow	 3	 3
 Pause	 Pause / Step / Freeze	 4	 4
 <</Size	 Zoom / Size	 5	 5
 <</Size	 << / Tune-	 6	 6
 >>/Subpage	 >> / Tune+	 7	 7
 Rec/D.Setup	 Setup / OPT /	 8	 8
 Rec/D.Setup	 Rec / Rec Mode	 9	 9
 Stop	 Stop / Hold	 -/--	 Shift + Guide / EPG / -/--
 I<</FAV	 Fav / Marker / PC	 0	 0
 I<</FAV	 I<< / Preset-	 Recall	 Back / Return
 >>I/Index	 >>I / Preset+	 Vol+	 Vol+
 Lang/Audio	 Audio / Lang I/II	 Mute	 Mute / Dimmer
 Hold	 Shift + Stop / Hold	 CH+	 CH+ / Page+

Hold





Original		Replacement	
	Vol-		Vol-
	CH-		CH- / Page-
	Red/Goto	+	Shift + Text /
	Red/Goto		Red / Netflix / Search
	Green/Angle		Info / Angle
	Green/Angle		Green / APP / Repeat
	Yellow/Repeat	+	Shift + Green / APP /
	Yellow/Repeat		Yellow / YouTube / Repeat
	Blue/A-B	+	Shift + Yellow / YouTube /
	Blue/A-B		Blue / Prime Video / Random
	Menu		Menu / Home
	Display		Display / Media
	Title/Exit		Exit / Cancel / Clear
	Title/Exit		Sound / Title
	Up		Up
	Left		Left
	OK		OK

Original		Replacement	
	Right		Right
	Down		Down
	Source		AV / Input / RDS
	EPG/D.Menu		D.Menu / Top
	EPG/D.Menu		Guide / EPG / -/-

