





 

 



 

 

 

 

 












 


 
 

 

 


 















 




 






 

 

 
 
 

 




Original		Replacement		Original		Replacement	
	DVD Power		Power		<<		<<
	1		1		>>		>>
	2		2		Stop		Stop
	3		3		Play / Pause		Play
	4		4		Play / Pause		Pause
	5		5		I<<		I<<
	6		6		>>I		>>I
	7		7		Return		Back
	8		8		Step		Shift + Pause
	9		9		Clear		Shift + Exit
	0		0		Top Menu		Shift + Menu
	Open / Close		Exit		Top Menu		D. Menu
	Setup		Options		Display		Info
	Zoom		Eject		Menu		Menu
	3D Sound		3D		Up		Up
	Bookmark		Pre Ch		Left		Left
	Volume Con.		Guide		Enter		Ok





Original	Replacement	Original	Replacement
 Right	 Right		
 Down	 Down		
 Audio	 Dual		
 Sub Title	 Subt		
 Angle	 Format		
 Repeat	 Text		
 Repeat A-B	 +  Shift + Text		

