







 



 







 


 
 



 



 









 







 

 



 















Original	Replacement	Original	Replacement
 Power	 Power	 Menu	 Menu / Home
 <<	 << / Tune-	 9	 9
 >>	 >> / Tune+	 0/AV	 AV / Input / RDS
 Stop	 Stop / Hold	 0/AV	 0
 Wide	 Picture / Format	 i	 Info / Angle
 Red	 Red / Netflix / Search	 Up	 Up
 Green	 Green / APP / Repeat	 Cancel	 Shift + Exit / Cancel / Clear
 Yellow/><	 Yellow / YouTube / Repeat	 Left	 Left
 Blue	 Blue / Prime Video / Random	 Right	 Right
 1	 1	 Exit	 Exit / Cancel / Clear
 2	 2	 Down	 Down
 3	 3	 OK	 OK
 4	 4	 Play	 Play / Slow
 5	 5	 Pause	 Pause / Step / Freeze
 6	 6	 Lang(AD)	 Audio / Lang I/II
 7	 7	 Subt.	 Subtitle / EQ
 8	 8	 FAV	 Fav / Marker / PC





	Original	Replacement		Original	Replacement
	Tv/Radio	TV/Radio /			
	P+	CH+ / Page+			
	Vol+	Vol+			
	Guide	Guide / EPG / -/--			
	Mute	Mute / Dimmer			
	Text	Text / Goto			
	P-	CH- / Page-			
	Vol-	Vol-			

