

































 







 









 



 



 





















 



 

 

 

 

 

 







Original	Replacement	Original	Replacement
 Power	 Power	 Mute	 Mute / Dimmer
 Tv/AV	 AV / Input / RDS	 Vol-	 Vol-
 1	 1	 Up	 Up
 2	 2	 CH+	 CH+ / Page+
 3	 3	 Vol+	 Vol+
 Eject	 Eject / Surround	 Left	 Left
 4	 4	 OK	 OK
 5	 5	 Right	 Right
 6	 6	 Sys Menu	 D.Menu / Top
 Play/Pause	 Play / Slow	 CH-	 CH- / Page-
 7	 7	 Down	 Down
 8	 8	 Display	 Display / Media
 9	 9	 Picture	 Picture / Format
 Stop	 Stop / Hold	 Sound	 Sound / Title
 0	 0	 Timer	 Sleep / Timer
 -/--	 Shift + Guide / EPG / -/--	 Nicam/A2	 Audio / Lang I/II
 Return	 Back / Return	 Lan/Prog-	 Shift + CH- / Page-

Original	Replacement	Original	Replacement
 Mute	 Mute / Dimmer	 Vol-	 Vol-
 Up	 Up	 CH+	 CH+ / Page+
 Vol+	 Vol+	 Left	 Left
 OK	 OK	 Right	 Right
 Sys Menu	 D.Menu / Top	 CH-	 CH- / Page-
 Down	 Down	 Display	 Display / Media
 Picture	 Picture / Format	 Sound	 Sound / Title
 Timer	 Sleep / Timer	 Nicam/A2	 Audio / Lang I/II
 Lan/Prog-	 Shift + CH- / Page-		





Original	Replacement
Zoom/Prog+	Shift + CH+ /
Sub	Subtitle / EQ
Goto	Text / Goto
SET/Tv/TXT/DVB-	Setup / OPT /
Menu/Cancel/Tv Format	Menu / Home
ANG/Reveal/Exit	Exit / Cancel / Clear
Title/info	Shift + Sound / Title
<</Hold/Languag	<< / Tune-
>>/Size/Text	>> / Tune+
<</Subpage	<< / Preset-
FAV	Fav / Marker / PC
>> /Index	>> / Preset+
EPG	Guide / EPG / /--
Red/Pro	Red / Netflix / Search
Tv/Radio	TV/Radio /
Green/Slow/Audio	Green / APP / Repeat
Yellow/Rep/Freeze	Yellow / YouTube / Repeat

Original	Replacement
Blue/A-B/Subtitle	Blue / Prime Video / Random

