 


 



 





 



 



 





















 




 
 

 

 

 



 

 

 















 







 










Original	Replacement	Original	Replacement
 Power	 Power	 Exit	 Exit
 Mute	 Mute	 Up / CH+	 Up
 1	 1	 Up / CH+	 Ch +
 2	 2	 Down / CH-	 Down
 3	 3	 Down / CH-	 Ch -
 4	 4	 Right / V+	 Right
 5	 5	 Right / V+	 Vol +
 6	 6	 Left / V-	 Left
 7	 7	 Left / V-	 Vol -
 8	 8	 OK / Group	 Ok
 9	 9	 <<	 <<
 0	 0	 >>	 >>
 FAV	 PRE-CH	 I<<	 I<<
 Recall	 BACK	 >>I	 >>I
 Menu	 MENU	 FILELIST	 Smart
 EPG	 GUIDE	 FILELIST	 List
 Info	 INFO	 Rec	 Rec

Original	Replacement	Original	Replacement
 Power	 MUTE	 EXIT	 SHIFT
 MUTE	 TV	 EXIT	 AUX
 1	 DVD	 EXIT	 SAT
 2	 SOUND	 EXIT	 REC MODE
 3	 AD	 EXIT	 PLAY MODE
 4	 SETTINGS	 EXIT	 STOP
 5	 OPT	 EXIT	 PAUSE
 6	ECO	 EXIT	 SKIP BACKWARD
 7	3D	 EXIT	 SKIP FORWARD
 8	TIMER	 EXIT	 REPEAT
 9	AV	 EXIT	 SEARCH
 0	 TOP MENU	 EXIT	 PICTURE
 FAV	 DISPLAY INFO	 EXIT	 FORMAT
 Recall	 MENU	 EXIT	 E-MANUAL
 Menu	 OK	 EXIT	 REPEAT
 EPG	 VOL +	 EXIT	 ZOOM
 Info	 Left	 EXIT	 TIMER
	 Vol -	 EXIT	 AV
	 Right	 EXIT	
	 HOME	 EXIT	
	 SMART	 EXIT	
	 APP	 EXIT	
	 MEDIA	 EXIT	
	 CH +	 EXIT	
	 CH -	 EXIT	
	 VOL +	 EXIT	
	 VOL -	 EXIT	
	 Left	 EXIT	
	 Right	 EXIT	
	 OK	 EXIT	
	 Left	 EXIT	
	 Right	 EXIT	
	 Vol +	 EXIT	
	 Vol -	 EXIT	
	 Left	 EXIT	
	 Right	 EXIT	
	 OK	 EXIT	
	 Left	 EXIT	
	 Right	 EXIT	
	 Vol +	 EXIT	
	 Vol -	 EXIT	
	 Left	 EXIT	
	 Right	 EXIT	
	 OK	 EXIT	
	 Left	 EXIT	
	 Right	 EXIT	
	 Vol +	 EXIT	
	 Vol -	 EXIT	
	 Left	 EXIT	
	 Right	 EXIT	
	 OK	 EXIT	
	 Left	 EXIT	
	 Right	 EXIT	
	 Vol +	 EXIT	
	 Vol -	 EXIT	
	 Left	 EXIT	
	 Right	 EXIT	
	 OK	 EXIT	
	 Left	 EXIT	
	 Right	 EXIT	
	 Vol +	 EXIT	
	 Vol -	 EXIT	
	 Left	 EXIT	
	 Right	 EXIT	
	 OK	 EXIT	
	 Left	 EXIT	
	 Right	 EXIT	
	 Vol +	 EXIT	
	 Vol -	 EXIT	
	 Left	 EXIT	
	 Right	 EXIT	
	 OK	 EXIT	
	 Left	 EXIT	
	 Right	 EXIT	
	 Vol +	 EXIT	
	Vol -	 EXIT	
	Left	 EXIT	
	Right	 EXIT	
	OK	 EXIT	
	Left	 EXIT	
	Right	 EXIT	
	Vol +	 EXIT	
	Vol -	 EXIT	
	Left	 EXIT	
	Right	 EXIT	
	OK	 EXIT	
	Left	 EXIT	
	Right	 EXIT	
	Vol +	 EXIT	
	Vol -	 EXIT	
	Left	 EXIT	
	Right	 EXIT	
	OK	 EXIT	
	Left	 EXIT	
	Right	 EXIT	
	Vol +	 EXIT	
	Vol -	 EXIT	
	Left	 EXIT	
	Right	 EXIT	
	OK	 EXIT	
	Left		



Original		Replacement		Original		Replacement	
	Lang		Dual				
	Time Shift		3D				
	TV / Radio		TV/R				
	Dev List		Media				
	Stop		Stop				
	Play / Pause		Play				
	Zoom		Eject				
	Subtitle		Subt				
	Auto		Options				
	Text		Text				
	Red / Fav. / Daily		Red				
	Green / Del. / Weekly		Green				
	Yellow / Move / P.Info		Yellow				
	Blue / Lock /		Blue				
	Blue / Lock /		AV				

