



| Original   | Replacement   |
|--|---|
|  Standby          |  Power               |
|  Mute             |  Mute / Dimmer       |
|  1                |  1                   |
|  2                |  2                   |
|  3                |  3                   |
|  4                |  4                   |
|  5                |  5                   |
|  6                |  6                   |
|  7                |  7                   |
|  8               |  8                  |
|  9              |  9                 |
|  i / Display    |  Display / Media   |
|  0              |  0                 |
|  Recall / Mouse |  Back / Return     |
|  TV / Radio     |  TV/Radio /        |
|  Audio          |  Audio / Lang I/II |
|  SUB-T          |  Subtitle / EQ     |

| Original  | Replacement  |
|---|--|
|  Source        |  AV / Input / RDS         |
|  www / Browser |  Smart / List             |
|  Up            |  Up                       |
|  Left          |  Left                     |
|  Enter         |  OK                       |
|  Right         |  Right                    |
|  Menu          |  Menu / Home              |
|  Down          |  Down                     |
|  Exit          |  Exit / Cancel / Clear    |
|  Vol +        |  Vol+                    |
|  Home        |  Shift + Menu /         |
|  CH +        |  CH+ / Page+            |
|  Setup       |  Setup / OPT /          |
|  CH -        |  CH- / Page-            |
|  Vol -       |  Vol-                   |
|  Refresh     |  Info / Angle           |
|  Red         |  Red / Netflix / Search |





| Original | Replacement                                | Original | Replacement |
|----------|--|----------|-------------|
|          | Green<br>Green / APP / Repeat              |          |             |
|          | Yellow<br>Yellow / YouTube / Repeat        |          |             |
|          | Blue<br>Blue / Prime Video / Random        |          |             |
|          | Screenshot<br>D.Menu / Top                 |          |             |
|          | Stop<br>Stop / Hold                        |          |             |
|          | Play/Pause / Size<br>Play / Slow           |          |             |
|          | Play/Pause / Size<br>Pause / Step / Freeze |          |             |
|          | Play/Pause / Size<br>Zoom / Size           |          |             |
|          | TXT / Mix<br>Text / Goto                   |          |             |
|          | << / Index<br><< / Tune-                   |          |             |
|          | >> / Hold<br>>> / Tune+                    |          |             |
|          | >> / Hold<br>Shift + Stop /                |          |             |
|          | I<< / Reveal<br>I<< / Preset-              |          |             |
|          | >>I / Cancel<br>>>I / Preset+              |          |             |
|          |  |          |             |
|          |  |          |             |
|          |  |          |             |

