



 

 

 








 
 
 

 

 
 
 

 






 
 





 



 

 



 



 



 



 



 
 





Original	Replacement	Original	Replacement
	Power		Power
	Timer/Play		3D
	Clock/Timer		AV
	Dimmer		Format
	Auto Off		Exit
	Sleep		Sleep
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	+10		Guide
	Del		List
	Program		Shift + Sleep
	Repeat		Text
	Play Mode		Options
	DAB/FM		Red
	Play/Pause CD		Play
	AUX		Green
	<</><<		<<
	Play/Pause iPod		Pause
	>>/>>		>>
	Stop		Stop
	Re-Master		Dual
	D.Bass		Smart
	Display		Info





Original	Replacement	Original	Replacement
 Surround	 Subt		
 Preset EQ	 Media		
 iPod Menu	 Menu		
 Bass/Treble	 TV/R		
 Up	 Up		
 Down	 Down		
 Right	 Right		
 Left	 Left		
 OK	 Ok		
 Auto Preset	 Pre Ch		
 Tune Mode	 Back		
 DAB Menu	 D. Menu		
 DAB Secondary	 Eject		

