 

 
 
 

 
 
 
 


 




 
























| Original | Replacement |
|---|-------------|
|  | Power |
|  | 3D |
|  | TV |
|  | TV |
|  | 1 |
|  | 2 |
|  | 3 |
|  | 4 |
|  | 5 |
|  | 6 |
|  | 7 |
|  | 8 |
|  | 9 |
|  | Eco |
|  | 0 |
|  | Source |
|  | Vol+ |

| Original | Replacement |
|---|-------------|
|  | Mute |
|  | P+ |
|  | Vol- |
|  | P- |
|  | Info |
|  | Option |
|  | Smart Tv |
|  | Guide |
|  | Menu |
|  | Up |
|  | Left |
|  | OK |
|  | Right |
|  | Back |
|  | Down |
|  | Exit |
|  | Zoom- |

 

 

 

 

| Original | Replacement |
|---|------------------|
|  | Power |
|  | Shift + 3 |
|  | Shift + 1 |
|  | TV/Radio / |
|  | 1 |
|  | 2 |
|  | 3 |
|  | 4 |
|  | 5 |
|  | 6 |
|  | 7 |
|  | 8 |
|  | 9 |
|  | Display / Media |
|  | 0 |
|  | AV / Input / RDS |
|  | Vol+ |

| Original | Replacement |
|---|-----------------------|
|  | Mute / Dimmer |
|  | CH+ / Page+ |
|  | Vol- |
|  | CH- / Page- |
|  | Info / Angle |
|  | Setup / OPT / |
|  | Smart / List |
|  | Guide / EPG / -/- |
|  | Menu / Home |
|  | Up |
|  | Left |
|  | OK |
|  | Right |
|  | Back / Return |
|  | Down |
|  | Exit / Cancel / Clear |
|  | Shift + Down |





| Original | Replacement |
|--|---|
|  Zoom+ |  Shift + Up |
|  @/Home |  D.Menu / Top |
|  Sleep |  Sleep / Timer |
|  Pre-CH |  Shift + Back / Return |
|  FAV |  Fav / Marker / PC |
|  List |  Shift + Smart / List |
|  Red |  Red / Netflix / Search |
|  Green |  Green / APP / Repeat |
|  Yellow |  Yellow / YouTube / Repeat |
|  Blue |  Blue / Prime Video / Random |
|  OO/Lang |  Audio / Lang I/II |
|  Subtitle |  Subtitle / EQ |
|  Text |  Text / Goto |
|  I< |  I<< / Preset- |
|  Stop |  Stop / Hold |
|  Play |  Play / Slow |
|  Pause |  Pause / Step / Freeze |

| Original | Replacement |
|---|--|
|  > |  >> / Preset+ |
|  << |  << / Tune- |
|  Rec |  Rec / Rec Mode |
|  >> |  >> / Tune+ |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

