




 

 




 


 




 





 

 






 
 



 







 

 
 

 

 

 




 

 

 
 




Original	Replacement	Original	Replacement
	Power		Power
	Home		Smart
	Disc/Pop Up Menu		Menu
	Radio		TV/R
	Audio Source		AV
	Top Menu		Shift + Menu
	Back		Back
	:≡/Options		Options
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	I<		I<<
	>I		>>I
	Stop		Stop
	Eject		Eject
	Play		Play
	Pause		Pause
	<<		<<
	>>		>>
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Audio		Shift + Dual
	III/Sound Settings		Dual
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8



