








































Original	Replacement
 Power	 Power
 Red/Timer	 Red / Netflix / Search
 Red/Timer	 Sleep / Timer
 Green/O	 Green / APP / Repeat
 Yellow/[<>]	 Shift + Picture / Format
 Yellow/[<>]	 Yellow / YouTube / Repeat
 Blue/I-II	 Blue / Prime Video / Random
 Blue/I-II	 Audio / Lang I/II
 [=]	 Text / Goto
 [+]	 Stop / Hold
 [:=]	 Smart / List
 [?]	 Play / Slow
 Smart ♪	 Sound / Title
 Smart Picture	 Picture / Format
 Up	 Up
 Left	 Left
 OK	 OK

Original	Replacement
 Right	 Right
 Down	 Down
 Menu	 Menu / Home
 []	 D.Menu / Top
 Vol+	 Vol+
 A/CH	 Display / Media
 P+	 CH+ / Page+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 P-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7





Original	Replacement	Original	Replacement
	8		8
	9		9
	[i+]		Info / Angle
	0		0
	AV		AV / Input / RDS

Original	Replacement

