












































 


 


















 
 


Original	Replacement	Original	Replacement
On/Off	 Power	TV/AV	 AV / Input / RDS
Mute	 Mute / Dimmer	Menu	 Menu / Home
Still	 Pause / Step / Freeze	Menu Up	 Up
Txt Stop	 Stop / Hold	Info	 Info / Angle
Tune-	 << / Tune-	Menu Left	 Left
Tune+	 >> / Tune+	OK Enter	 OK
Tone-	 I<< / Preset-	Menu Right	 Right
Tone+	 >>I / Preset+	Back	 Exit / Cancel / Clear
Menu audio	 Audio / Lang I/II	Menu Down	 Down
Subt.List	 Subtitle / EQ	Swap	 Back / Return
Bright+ Mode	 Picture / Format	Volume+	 Vol+
Txt Expand	 Zoom / Size	View	 Smart / List
Sleep Timer	 Sleep / Timer	Chan.Up	 CH+ / Page+
Return TV	 TV/Radio /	Volume-	 Vol-
Update	 D.Menu / Top	Display	 Display / Media
Help	 Setup / OPT /	Chan.Down	 CH- / Page-
Text	 Text / Goto	1	 1



Original	Replacement	
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9
Guide -/-- 1.		Guide / EPG / -/--
0/10		0
2.Fav P/C 2.		Fav / Marker / PC
Red		Red / Netflix / Search
Green		Green / APP / Repeat
Yellow		Yellow / YouTube / Repeat
Blue		Blue / Prime Video / Random
On/Off	 + 	Shift + Power
Mix Scan	 + 	Shift + Text / Goto

Goto

Original	Replacement	
AV 2	 + 	Shift + AV / Input / RDS
Audio+	 + 	Shift + Vol+
Audio-	 + 	Shift + Vol-
Disp	 + 	Shift + Display / Media
On Pip	 + 	Shift + 1
Dim Pip	 + 	Shift + 2
Rotate Pip	 + 	Shift + 3
Search	 + 	Shift + Red / Netflix /

