
 







 
 


 







 












 
 
 



 
 

 
 




Original	Replacement	
On/Off		Power
Audio Off		Mute
Slow Down		Ch -
Subt.		Subt
Auto/Track		3D
Title		List
Slow Up		Ch +
Rep/A-B		Shift + Text
Menu		Menu
Stop		Stop
DVD/TV		TV/R
Pause		Pause
Pepeat/1/All		Text
Progr.		Sleep
Next		>>I
Return		Back
Top Menu		D. Menu

Original	Replacement	
Zoom		Shift + Eject
Menu Up		Up
Display		Info
Menu Left		Left
OK Enter		Ok
Menu Right		Right
Menu Down		Down
Volume+		Vol +
Prev.		I<<
Volume-		Vol -
1		1
2		2
3		3
4		4
5		5
6		6
7		7



Original	Replacement	Original	Replacement
8	 8		
9	 9		
+10	 Guide		
Record	 Rec		
0	 0		
Play	 Play		
Rewind	 <<		
C/CH	 Pre Ch		
F.Forward	 >>		
Mark	 +  Shift + 7		
Open/Close	 Eject		
Input Source	 AV		

