

 








 






 















 







 





 

















 



 









 
 






 



 

 



 
 


Original	Replacement
 Standby	 Power
 Eject	 Eject / Surround
 1	 1
 2	 2
 3	 3
 Subtitle	 Subtitle / EQ
 4	 4
 5	 5
 6	 6
 Mute	 Mute / Dimmer
 7	 7
 8	 8
 9	 9
 Goto	 Text / Goto
 +10	 Guide / EPG / -/-
 0	 0
 Clear	 Exit / Cancel / Clear

Original	Replacement
 Audio	 Audio / Lang I/II
 OSD	 Display / Media
 Angle	 Shift + Info / Angle
 Zoom	 Zoom / Size
 Return	 Back / Return
 Title	 Sound / Title
 Up	 Up
 Menu	 Menu / Home
 Left	 Left
 Select	 OK
 Right	 Right
 Setup	 Setup / OPT /
 Down	 Down
 PSM	 TV/Radio /
 Play	 Play / Slow
 Stop	 Stop / Hold
 Pause/Step	 Pause / Step / Freeze





	Original		Replacement		Original		Replacement
		<<		<< / Tune-			
		>>		>> / Tune+			
		I<<		I<< / Preset-			
		>>I		>>I / Preset+			
		Slow		Shift + Play /			
		Repeat		Green / APP / Repeat			
		A-B		Yellow / YouTube / Repeat			
		P/N		D.Menu / Top			
		Key L		CH+ / Page+			
		Key #		CH- / Page-			
		Vol-		Vol-			
		Vol+		Vol+			
		Info		Info / Angle			
		Keyboard		Smart / List			
		IS		Fav / Marker / PC			
		PS		Picture / Format			

