



Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Setup		Menu
	16:9		Format
	Vol+		Vol +
	Vol-		Vol -
	CH+		Ch +
	CH-		Ch -
	Audio		Dual
	Home		Smart
	Exit		Exit
	Info		Info
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Yellow		Yellow
	Red		Red
	Blue		Blue
	Green		Green
	<<		<<
	>>		>>
	Play		Play





Original		Replacement		Original		Replacement	
	Pause		Pause		Nothing 3		Shift + Back
	Stop		Stop				
	Rec		Rec				
	I<<		I<<				
	>>I		>>I				
	Repeat		Shift + Text				
	BG-Music		Media				
	Goto		TV/R				
	Sub-T		Subt				
	EPG		Guide				
	TTX		Text				
	Thumb		Back				
	Zoom		Eject				
	P/N		AV				
	FAV		Pre Ch				
	Nothing 1		Shift + Smart				
	Nothing 2		Shift + Media				

