




 

 
 
 









 
 

 

 

 
 








 




 

 

 

 
 
 




 
 
 












 

 

 
 


 
 



 
 

 

 

 
 
 


 


Original	Replacement	Original	Replacement
Power ON/Off	 Power	Pr 2	 2
Vol Rs-/Effect	 Subt	Pr 3	 3
Sleep	 Sleep	Pr 4	 4
CD Random	 D. Menu	Pr 5	 5
Tape 2 Pre./eq	 Dual	Pr 6	 6
Repeat	 Text	Mode	 Options
Display	 Info	Pr 7	 7
CD/Theater	 TV/R	Pr 8	 8
Volume+	 Vol +	Program	 +  Shift + Sleep
CD Play	 Play	Pr 9	 9
CD Rewind	 I<<	Pr 0/10	 0
CD F.FWD	 >>I	Store/Center-	 Format
CD Pause	 Pause	Tape 1 Play	 Yellow
Tape 1 Hall/Ats	 3D	Tape 1 F.FWD	 Blue
Funct./Direct	 List	6 Ch/Geq	 +  Shift + 6
Volume-	 Vol -		
Pr 1	 1		



 
Original	Replacement	Original	Replacement
Power ON/Off	 Power	Pr 4	 4
Mute	 Mute	Phono/Scan	 Media
Tape 1 Stop	 +  Shift + Stop	Pr 5	 5
Tape 2 Pre./eq	 Smart	Tuner/Bypass	 TV/R
CD/Theater	 Text	Pr 6	 6
CD Rewind	 I<<	Pr 7	 7
Tape 1 Hall/Ats	 Format	Pr 8	 8
CD F.FWD	 >>I	Band	 Eject
CD Play	 Play	Fm Mode/Disc	 D. Menu
Funct./Direct	 List	Tape 1 Rew	 Green
Input/Source	 AV	Tape 1 Play	 Yellow
Volume+	 Vol +	Tape 1 F.FWD	 Blue
Volume-	 Vol -		
Pr 1	 1		
Stop	 Stop		
Pr 2	 2		
Pr 3	 3		


 
 



Original	Replacement	Original	Replacement
Power ON/Off	 Power	Volume+	 Vol +
Mute	 Mute	Next/Prog+	 Ch +
Every Pop	 Red	Volume-	 Vol -
Tape 1 Stop	 +  Shift + Stop	Tape 1 Hall/Ats	 +  Shift + 3D
Tape 1 Preset	 +  Shift + List	Mode	 Options
Vol Rs-/Effect	 +  Shift + Left	Prev./Prog-	 Ch -
Preset Pause	 +  Shift + Pause	Program	 +  Shift + Sleep
Sleep	 Sleep	CD Play	 Play
Tape 2 Pre./eq	 +  Shift + Media	Stop	 Stop
Repeat	 Text	Pr 1	 1
Input/Source	 AV	Tape 2	 Down
Display	 Info	CD Rewind	 I<<
CD Random	 +  Shift + Text	Pr 2	 2
Vol Rs+/S.Mode	 +  Shift + Right	Timer/A.Track	 +  Shift + Dual
Woofer/Speed	 Subt	+10/Next Sv+vV	 Guide
CD/Theater	 List	CD F.FWD	 >>I
Funct./Direct	 Menu	Tape 2	 Left



 

 



Original	Replacement	Original	Replacement
Power ON/Off	 Power	Volume+	 Vol +
Mute	 Mute	Next/Prog+	 Ch +
Every Pop	 Red	Volume-	 Vol -
Tape 1 Stop	 +  Shift + Stop	Tape 1 Hall/Ats	 +  Shift + 3D
Tape 1 Preset	 +  Shift + List	Mode	 Options
Vol Rs-/Effect	 +  Shift + Left	Prev./Prog-	 Ch -
Preset Pause	 +  Shift + Pause	Program	 +  Shift + Sleep
Sleep	 Sleep	CD Play	 Play
Tape 2 Pre./eq	 +  Shift + Media	Stop	 Stop
Repeat	 Text	Pr 1	 1
Input/Source	 AV	Tape 2	 Down
Display	 Info	CD Rewind	 I<<
CD Random	 +  Shift + Text	Pr 2	 2
Vol Rs+/S.Mode	 +  Shift + Right	Timer/A.Track	 +  Shift + Dual
Woofer/Speed	 Subt	+10/Next Sv+vV	 Guide
CD/Theater	 List	CD F.FWD	 >>I
Funct./Direct	 Menu	Tape 2	 Left



Original	Replacement
Pr 3	 3
Disc 1 Eject	 +  Shift + 1
Disc 2	 +  Shift + 2
Classic Track	 Dual
Disc 3 Eject	 +  Shift + 3
Disc 4 Eject	 +  Shift + 4
Track-/Echo	 +  Shift + Ch -
Intro	 +  Shift + Info
Edit	 Format
X-Bass/Bgm	 Green
Phono/Scan	 Ok
Surround/Test	 +  Shift + Subt
Fm Mode/Disc	 D. Menu
Track+/Karaoke	 +  Shift + Ch +
Dimmer	 +  Shift + Mute
Mark/Delete	 Back
Tuner/Bypass	 Yellow

Original	Replacement
Erase/Snooze	 +  Shift + Back
Disc 5	 +  Shift + 5
6 Ch/Geq	 6
Tape 1 Rew	 +  Shift + <<
Space/Default 3D	 3D
CD Pause	 Pause
Index+/Vol Ls+	 +  Shift + Up
Tape 1 F.FWD	 +  Shift + >>
Store/Center-	 Blue
Tape 1 Play	 +  Shift + Play
Search/Center	 +  Shift + TV/R
Clear	 Exit
Index-/Vol Ls-	 +  Shift + Down
ON/Off	 +  Shift + Power
Tape 1 Rec	 Rec
Eject	 Eject
Center	 TV/R



Original	Replacement	Original	Replacement
Band	 Smart		
Aux/Video	 +  Shift + AV		
Tape 2 REC./Jazz	 +  Shift + Rec		
Tape 2	 Up		
Tape 2 FF/AudioR	 Right		
Ubs/Check	 Media		
Tune/Vol SW-	 <<		
Tune/Vol SW+	 >>		

